



赤ちゃん医学から生まれた

Aprica

高低調節搖擺餐搖床椅 High Low Bed&Chair

L-11

《使用說明書/保證書》 User Guide/product warranty

- 使用前請充分詳閱「使用說明書」，並正確使用。
- 產品樣式，顏色未經予告而有所變化，請以實物為主。
- 本說明書所載內容，若發現記載錯誤或與實物不符等問題時，請惠予通知本公司。
- 為維護嬰幼兒安全，本說明書使用後請妥善保管，以便隨時翻閱。
 - ・ Please read this "User Guide" carefully before using and please using the Hing Low Bed & chair correctly.
 - ・ The Product style usage this manual may have slight differences with the actual objects .
 - ・ Please give us notice if you find this Product style usage has something wrong or incorrect.
 - ・ Please keep this Instruction Manual handy for any prompt usage.


前言

首先感謝您選購由嬰兒醫學中所誕生的愛普力卡製品。此使用說明書將詳載高低調節搖擺餐椅正確的操作方法與保養方式。請於使用本產品前，詳閱說明書並依說明書上指示，正確使用高低調節搖擺餐椅。為防臨時之需，**請務必保管好此「使用說明書」**。為方便使用者了解其操作方法及產品結構，「使用說明書」中所使用圖形與實物有些許差異時，請以實品為準。

警告

- 1.無論在任何情況下使用此產品時(例如:睡姿或坐姿)，都必須扣上安全帶來確保安全。
 - 2.必須確保兒童在成年人的視線範圍或看管下使用本產品，不可遠離餐椅上的兒童。
 - 3.兒童必須可以獨立坐穩，才可讓兒童使用此餐盤。
 - 4.如果兒童從餐椅上滑落，有可能嚴重受傷或導致死亡。
 - 5.任何一款坐臥兩用餐椅或僅可坐的餐椅，其餐盤的設計只作擺放食物用途並不能替代安全帶。為確保兒童安全，在安裝餐盤後也必須繫好安全帶。
 - 6.孩童座高未滿46cm或未滿18個月(參考月齡)時，請務必使用五點式安全帶。
- ※適用時期：體重18kg以下、坐起高度46cm以內(參考月齡新生兒~48個月以內)。
※主要材質：塑膠、金屬、縫製品。

各部位名稱

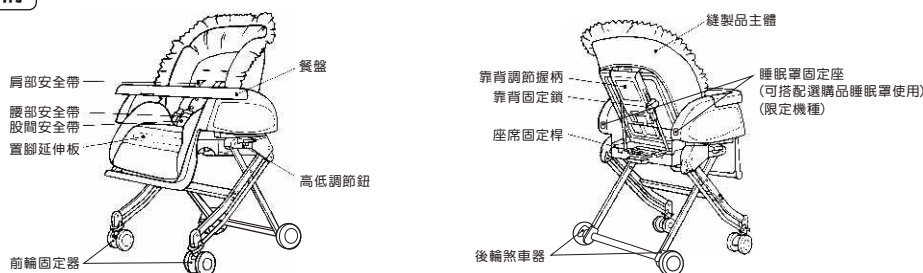

使用前的檢查・準備

★本製品為兒童在屋內所使用之物品。★使用前請務必進行各部位檢查工作。

檢查

- 螺絲**
使用前務必用螺絲起子確認所有的螺絲及螺絲帽是否鬆動。
- 後輪煞車器**
將後輪煞車器放下確認是否能上鎖。
注意：構造上不同於汽車的煞車器。
- 靠背**
使用時請押一下座椅靠背處，確認不會有搖晃的情形。
- 本產品使用一次時間以30分鐘至1小時為適當時間，一日使用總時間在2~3小時為佳。**

萬一發生或發現瑕疵破損、異狀時，請立即停止使用，務必由本公司維修部人員檢查及進行維修。

 
準備

- 注意：腰部安全帶鬆弛時請勿使用。—恐有兒童掉落之虞—
- 注意：寶寶乘坐於上時，請務必將輪子上鎖，以免滑動。
- 孩童乘坐時，請務必使用安全帶。
- 孩童座高未滿46cm或未滿18個月(參考月齡)時，請務必使用五點式安全帶。
- 腰部安全帶長度請配合孩童的成長進行調整。
- 腰部安全帶鬆緊的調整以成人約4根手指頭可放入的程度最為適當。




操作方法-1

後輪煞車器使用方法




- 操作時左右兩側務必同時進行。
- 注意：除移動之外請務必將後輪煞車器上鎖。進行搖擺時請務必將煞車器上鎖。

安全帶使用方法

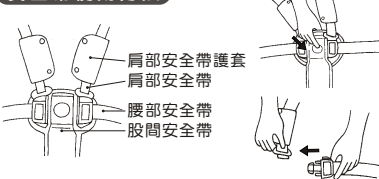

- 1.將肩部安全帶護套扣子解開。
- 2.押下股間安全帶上方「PRESS」，將腰部安全帶分開。
- 3.將腰帶扣上方之安全肩帶分開。


前輪固定器使用方法

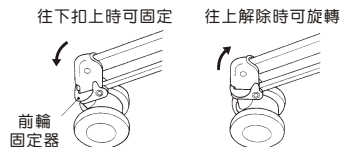


- 操作時左右兩側務必同時進行。
- 注意：除移動之外請務必將固定器上鎖。進行搖擺時請務必將固定器上鎖。

操作方法 -2

高度調節法 (高低調節在最低的位置時無法搖擺)

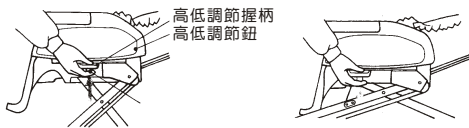

 1. 手握兩側高低調節握柄，以手指按住高低調節鈕並向上押，座椅車體即可進行高低調節。
2. 當您調整至欲使用的高度後再將按住高低調節鈕的手指放開即可固定。




3. 最後請確認左右兩側高度是否一致。若不一致時，請重複第一步驟。




操作方法 -3


靠背平躺使用方法

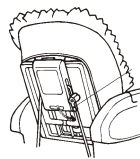

1. 靠背固定鎖朝縱向位置即為解除上鎖。

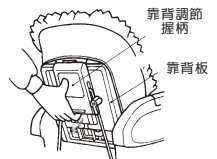

2. 以手將靠背調節握柄向外拉後即可調節靠背的角度。

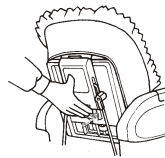

3. 將靠背調整至所需要的角度後，將靠背調節握柄回復原位即可固定。


 


4. 再將靠背固定鎖橫向鎖定即可。

注意：新生嬰兒由於頸椎尚未能挺直，此時期請勿將椅背坐直使用。

操作方法 -4

搖擺使用方法

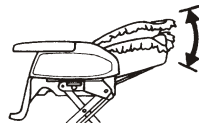

1. 請先確認車體高度在「1-5」之間。(高低調節在最低的位置時無法搖擺)

2. 將椅背平躺下，將靠背固定鎖上鎖後，並確認好前輪是否確實固定住。



3. 座席固定鎖調向右邊，車體即可進行搖擺。



4. 座席固定鎖調向左邊，車體即可固定。


操作方法 -5

置腳延伸板使用方法

《拆卸方法》



1. 將縫製品下方置腳延伸板拉出。

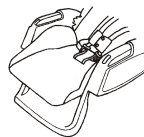

2. 以延伸座椅為目的使用之。

 
《安裝方法》




- 縮回時請由置腳延伸板正中央處由下往上朝內推送即可。

餐盤使用方法

《拆卸方法》



1. 餐盤內側之餐盤固定鎖朝橫向移動即解除上鎖裝置。

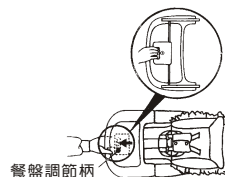

2. 拉出餐盤調節柄後，調到所需要的位置(共3段位置)。


《安裝方法》 安裝時請依相反程序將餐盤插進，並應注意確實將餐盤固定鎖往直立方向扣上，以確保餐盤的穩固。

新生兒護墊使用方法(限定機種)




<安裝後完成品>


- 請於平躺臥床狀態下使用。
- 當新生兒護墊的尺寸未能符合嬰幼兒成長所需時，請予以拆除。

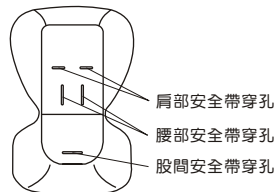

《安裝方法》

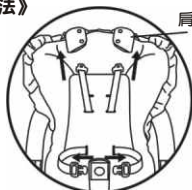

1. 取下肩部安全帶護套，分解

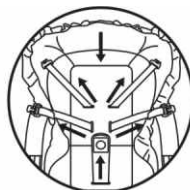

2. 將肩部安全帶、腰部安全帶、股間安全帶各穿過孔位置。




3. 安裝肩部安全帶護套。

多功能睡眠罩使用方法(限定機種)

《睡眠罩操作方式》

棉布+網布

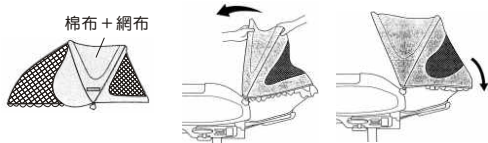

1. 將睡眠罩前後拉折打開調整使用。
2. 前後睡眠罩打開，前睡眠罩布簾蓋住前車體。

《睡眠罩固定於餐搖椅操作方式》

睡眠罩固定套




睡眠罩固定座

- 將睡眠罩左右邊上的睡眠罩固定套，由上往下嵌入睡眠罩固定座，直到拉柄有喀喳聲為止。

《頂面睡眠罩開啟方法》

粘扣

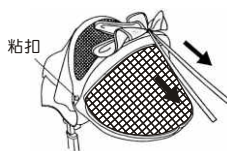

- ① 解開左右粘扣。
- ② 左右的拉帶向外拉開至底部。

搖擺切換法(限定機種)

-----限採用<W型水平、搖籃雙重懷抱式搖擺>機種-----

《W型水平搖擺》

 
搖椅呈一定的角度進行搖擺。



將切換拉柄向內押，即為W型水平搖擺。


《搖籃雙重懷抱式搖擺》

搖椅呈圓弧式變化進行搖擺。



將切換拉柄向外拉出，即為搖籃雙重懷抱式搖擺。

柔軟型護腳套使用方法(限定機種)

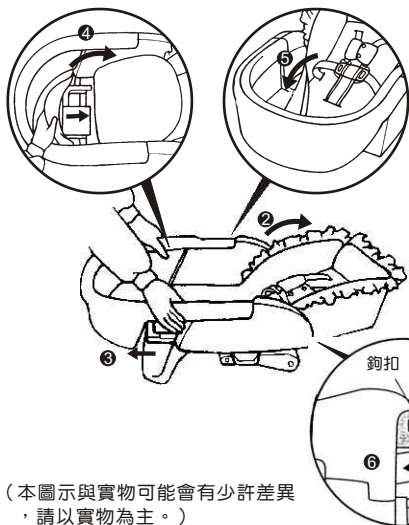

- ① 將後輪煞車器鎖上。
- ② 靠背調整至平躺位置。
- ③ 置腳延伸板拉出至定位。
- ④ 縫製品主體座部向上掀開，將柔軟型護腳套底部置於掀開處。
- ⑤ 將縫製品主體座部放下，蓋於柔軟型護腳套底部上方。
- ⑥ 柔軟型護腳套左右邊的鉤扣置座席兩側。

鉤扣

(本圖示與實物可能有少許差異，請以實物為主。)

縫製品保養方法



手洗 水溫不可超過30°C並請用手輕輕清洗。



請勿使用漂白劑。



請勿使用電熨斗。



請勿使用乾洗。



洗淨後請勿用力擰乾。



請平放晾乾。



Introduction

Thank you for choosing children's healthcare products from Aprica. This instruction manual provides directions for operation and maintenance of High Low Bed & Chair. Before using our product, please read through our instruction manual and use it correctly. For safety purposes, **please keep this 'instruction manual' carefully**. In order to make users easily understand the operations and product structures, if illustrations in the instruction manual appear different from the purchased product, please take the purchased product as standard.

Warning

1. Under no circumstances should the safety belt be unfastened while using this product (regardless of sitting or sleeping postures).
 2. Be sure to use the product for children under the guidance of adults. Do not leave children alone in the chair.
 3. Children must be able to sit tight before using this chair.
 4. If children slide or fall off the chair, it may cause severe injuries or death.
 5. Food trays of any type of dual-purpose dining chair or dining chair can only be used to put food and can not serve as safety belts. To ensure the safety of children, safety belt must be fastened even when children are sitting behind the trays.
 6. Children whose sitting height is less than 46 cm or whose age is younger than 18-month-old (reference age) must use five-point safety belt.
- ※Primary uses: Children weighted less than 18 kg, or whose sitting height is less than 46 cm (please refer to the monthly age of newborns younger than 48 months old)
- ※Primary materials: plastic, metal, sewn products

Names of component

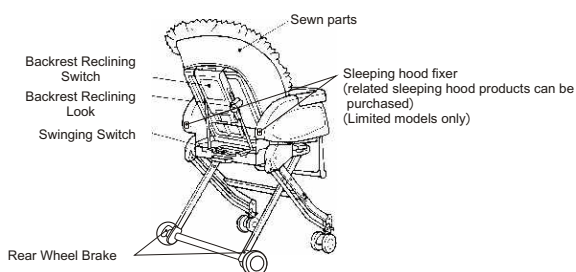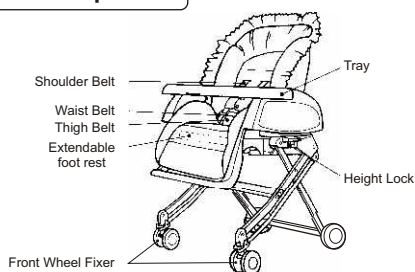

Checking and Getting ready before use

★This seat is designed for indoor only. ★Please check all parts before use.

 
Check

- Screws
Make sure all the screws are all tightened.
- Rear Wheel Brake
Make sure the Rear Wheel Brake are down and the wheels are locked.
Attention : The structure of which is not the same as car's safety brake system.
- Backrest
Make sure the backrest is not shaking when pressed.
- This product is best used for approximately 30 minutes to 60 minutes each time; or a daily usage of 2-3 hours.

Once there is any Breakage situation.
Please do not use and ask an inspection
by Aprica local agent.

Getting ready

- Attention : Make sure the baby has buckled up when using the chair.
- Attention : Make sure the brakes are locked when the baby is on board .
- For the safety of the baby, please be sure to buckle up whenever the baby is sitting on the chair.
- Be sure to use 5-point Safety belts for children whose sitting height is less than 46 cm or aged under 18 months old.
- The waist belt needs to be adjusted according to the baby's growth.
- The waist belt adjusted should fit in with 4 adult's fingers after tightened.




<Rear Wheel Brake>



<Usage of the waist belt adjusted>


 
<The end of the waist belts>




<The end of the crotch belts>

Attention : The end of the waist belts should be at least 3cm or more.
The end of the crotch belts should be at least 5cm or more.


Operation-1

 Usage of the Rear Wheel Brake




- Make sure to lock both right and left wheels at the same time.
Attention: Unless crusing the chair, make sure the Rear Wheel Brake are engaged.
Make sure the Rear Wheel Brake are engaged when swinging.

Usage of the safety belt

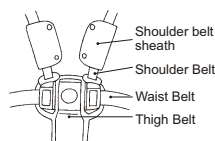


1. Unbutton the shoulder belt.
2. Press the button 'PRESS' on the thigh belt to loosen the waist belt.
3. Untie the safety waist belt.

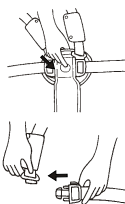


Usage of the Front Wheel Fixer

 Move down when locked



Front Wheel Fixer

 Move up when Released




- Make sure to lock both right and left wheels at the same time.
Attention: Unless crusing the chair, make sure the Front Wheel Fixer are engaged.
Make sure the Front Wheel Fixer are engaged when swinging.


Operation-2

Usage of height adjustment

 
(The cradle does not have the swing function when adjusted to the lowest height)



 1. Hold the height adjustment handle in both sides; press the height adjustment button to adjust the height.



 2. Release the height adjustment button to fix the cradle when it is adjusted to the desirable height.




3. Check both sides indicating marks are at the same position before use. Other wise go back to step 1.




Attention:
Except for holding the handle, do not put hands elsewhere around the cradle. Hands might be injured by the cradle frame. Do not adjust the cradle height while a child sits inside.

Operation-3


Usage of the Backrest Reclining

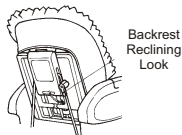

1. The backrest reclining switch is in vertical position. It means the reclining angle can be adjusted with the backrest switch handle.

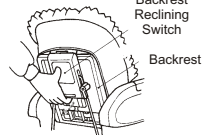

2. Pull the backrest switch handle to adjust the reclining angle.

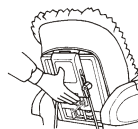

3. Adjust the backrest to the desired angle. Move the switch back to its origin.

 


4. Move the backrest reclining lock to horizontal. The backrest is locked in the desired angle.


Attention:
Because the neck and spine of a newborn have not fully developed, do not switch the backrest to the vertical position.

Operation-4


Usage of Swinging




1. Make sure the height is between 1-5. (The cradle does not have the swing function when adjusted to the lowest height)

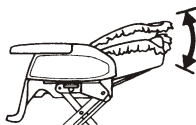

 2. Adjust the backrest to the horizontal position. Move the reclining lock to vertical position. Make sure the wheels are locked.



 3. Move the swinging switch to the right. The seat is now swinging.




4. Move the swinging switch to the left. The seat is now locked.


Operation-5

Usage of Extendable foot rest

« How to remove »

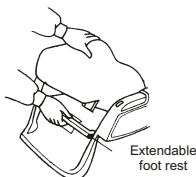

1. Lift up the fabric and pull out the Extendable foot rest.

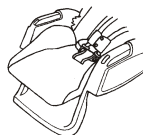

2. Put back the fabric on top of the Extendable foot rest.

 
« How to assemble »




• Lift up the extendable foot rest a little and push back into the seat.

Usage of Tray

« How to remove »



1. The tray can be adjusted when the tray adjustment lever is horizontal position.

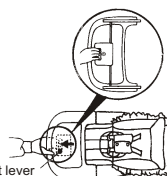

2. Pull the tray adjustment lever to release the tray.


« How to assemble » How to assemble: While installing, please assembling the tray in reverse order. Please make sure to switch the tray adjustment lock to the vertical position.

Usage of neonatal pads (Limited models only)




<Finished product>

- Please use it while the child is in the supine position.
- Please shorten the pad if the size does not fit the height of the child.

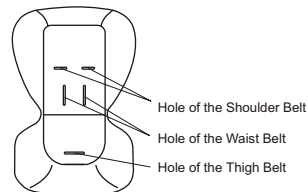

« How to assemble »

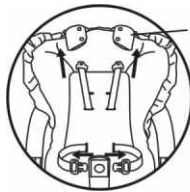

- 1.Remove the sheath and disassemble the waist belt.



- 2.Lace the shoulder, waist and thigh belt through fixing holes.






- 3.Putting the shoulder belt back into the sheath.

Usage of multi-purposes sleeping hood (Limited models only)


«Operation of the sleeping hood»

Cotton cloth + Mesh fabric

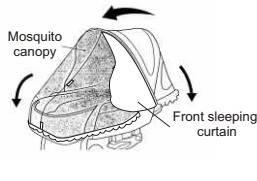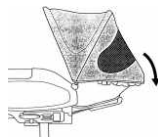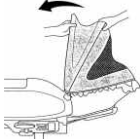


- 1.Open and adjust the fold of the sleeping hood.
- 2.Open the front and back sleeping hood. Using the front sleeping hood to cover the car front.


«How to fix the sleeping hood onto the High Low chair»

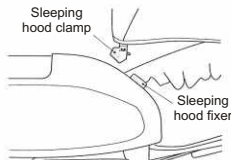

- Insert the left and right hood clamp vertically into the hood fixer until the handle makes the clicking sound.

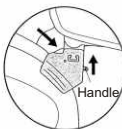

«How to opening the upper sleeping hood»

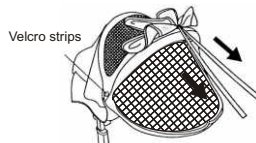


- 1.Unfasten the left and right Velcro strips
- 2.Pulling the left and right strips down to the bottom.

Usage of swing switch (Limited models only)

※Limited to W horizontal models and double swaddling swing cradles

«W type horizontal swing»

 
A rocking chair swings in a fixed angle.



Press the swing handle inwardly to switch it to the W type horizontal swing mode.


«Double swaddling swing cradles»

 A rocking chair swings in a curve.



Pull the swing handle outwardly to switch it to the double swaddling swing mode.

Usage of the soft type nursing socks (Limited models only)

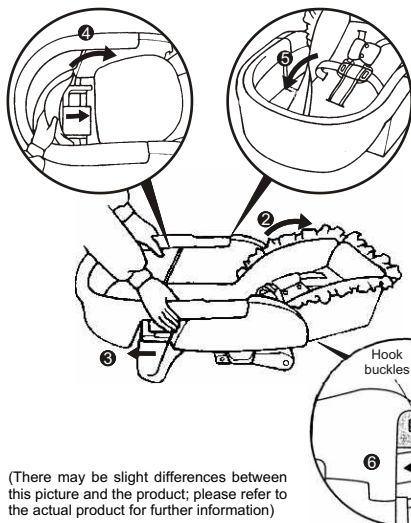

- 1 Fix brakes of the rear wheel.
- 2 Adjust the backrest to the horizontal position.
- 3 Pull out the extended footrest and fixed it to the desired position.
- 4 Open the main body of the sewn part upwardly and put the bottom of the nursing socks onto the opened sewn part.
- 5 Cover the main body of the sewn part on the nursing socks.
- 6 Fasten the left and right hook buckles of nursing socks in both seat sides.

(There may be slight differences between this picture and the product; please refer to the actual product for further information)

Sewn parts maintenance



Wash lightly by hand with water temperature 30°C. (Do not use washing machine.)



NO bleach.



NO electric ironing.



NO dry clean.



NO twist after cleaned.



Please put it flat to dry.