----保證書 ----- 〈僅

〈僅限台灣地區使用〉

保固規定

- 1) 消費者請於購買時要求經銷商在本保證書上蓋章,並填上銷售日期。
- 2) 本公司產品之保固期間為自購買日起一年間。
- 3) 產品在保固期間內需要維修服務時,請出示本保證書。
- 4)產品維修前,未出示本產品保證書或保證書尚未蓋店章、未填寫銷售日期時,即使於一年內購買,亦無法享有一年保固之免費修繕服務。

- 5)於品質保證期間內,由於零件短少、加工不良等製造商所引起之原因,由進口商提供免費修繕服務(含運費)。 若為消費者之責任,則計費維修。
- 6) 免費修繕服務不包含以下項目。
 - ◎非歸責於製造商責任之任何捐壞與故障。
 - ◎坐墊、遮陽篷等刮傷。
 - ◎使用者任意變更所引起。
 - ◎由自然災害或事故等原因所引起。
 - ◎框架自然劣化(塗料部分需時常保養)。
 - ◎錯誤的使用方法或保養不良所致。
 - ◎輪胎、車輪的自然消耗。

使用時,如發生故障或強烈撞擊、不慎掉落等情況及發現有零件需要更換時,台灣國內請向本公司維修中心聯絡, 海外地區請洽當地代理商聯絡,我們竭誠為您服務。

	Luvuna Cuahian	型號	
產品	Luxuna Cushion	購買日期	年 月 日
	姓名		
顧客資料	시나 시L	經銷商 確認章	
	電話 E-mail		(請務必蓋章或將保固貼紙貼於此處・保證方為有效)

- ○請確認購買時之經銷商店名稱,填寫型號、購買日期。
- ○本保證書不另行補發,因此請小心保管,避免遺失。
- ○本保證書填寫之個人資料,僅使用於產品保固及修理事宜。

總公司

アップリカ·チルドレンズプロダクツ合同会社 *社/大阪店 - 〒542-0082大阪市中央区島之内1-13-13 TEL0120-415-814

Aprica Children's Products G.K.

1-13-13, Shimanouchi, Chuo-Ku, Osaka, Japan

進口商

台灣愛普力卡股份有限公司

總公司營業部 地址:新竹縣竹北市台元街28號5樓之3

電話:(03)5525688 傳真:(03)5525690

維修服務中心 地址:新竹縣竹北市福興路885號

電話:(03)6561261 傳真:(03)6561267

公司網址:http://www.aprica.com.tw

意見信箱:0800@aprica.com.tw 統一編號:22662003

Aprica

LUXUNA Cushion

ラクーナ クッション

使用説明書/保證書

非常感謝您購買此產品。 此產品適用於出生後1個月~36個月,體 重15公斤以下的嬰幼兒。

※本説明書所敍述的出生後一個月,指的是母親懷孕37周以上,出生時體重超過2.5公斤以上,出生超過1個月的嬰幼兒。

使用前請詳細閱讀本說明書並正確地使用。請勿使用本說明書內容以外的方法 操作本產品。不僅無法充分發揮本產品 的功能也十分的危險。使用後,請妥善 保存此書。



R41118

-118 SG安全基準AFF

日 綠

使用前

使用前的注意事項
給保護者的建議/SG基準/本説明書的標示
使用上請注意2~4
警告/注意
製品取出時 5
製品特徵
各部位名稱 6
嬰幼兒手推車的使用方法
嬰幼兒手推車的開啟方法7~8
嬰幼兒手推車的開啟方法 ··········7~8 兩對面切換手把的使用方法 ·········9~10
兩對面切換手把的使用方法 9~10
兩對面切換手把的使用方法 9~10 手動車輪固定器的使用方法11~12
兩對面切換手把的使用方法
兩對面切換手把的使用方法 9~10 手動車輪固定器的使用方法 11~12 車輪煞車器的使用方法 12 按鈕式開放型扶手的開啟方法 13

讓嬰幼兒乘坐手推車的方法15

安全肩帶的高度調節方法	1	•
無段式平躺角度調整器的使用方法	1	
遮陽篷的使用方法	1	(
嬰幼兒手推車的收折方法20~	. 2	

縫製品的保養方法

^蓝 陽逢的拆卸万法 ·······	22
扶手保護套的拆卸方法 ·····	22
置物籃的拆卸方法 ······	22
座椅縫製品的拆卸方法 ⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯	23

座椅縫製品的安裝方法 24

日常保養 ------25~26

日常簡易保養

覺得故障嗎?送修前先確認 2	7
保管方法/廢棄方法2	8
保固與售後服務 2	9
MEMO3	J
但終 事 封店	Ξ

使用前的注意事項

給保護者的建議

嬰幼兒並非成人的縮小版。

特別是頸部尚未發育完全的新生兒更是如此。

請充分了解嬰幼兒的情況,並小心使用嬰幼兒手推車。

- ①請隨時注意嬰幼兒的情況,並避免連續使用。
- ②請避免讓嬰幼兒直接照射到陽光。

為嬰幼兒手推車內的溫度,比大人的感覺來得高。

- ③請避開人群多的地方,以避免噪音、粉塵。
- ④經過不平整的路面,請盡可能放慢速度,並且請避開引起震動、衝擊的路段。
- ⑤本說明書所使用的插圖、組裝等,為求簡單明瞭,並非與實品完全相同。請以實際物品為主。

SG基準

○有顯示SG標章的手推車,表示有按照日本製品安全協會的規定,達到以下各項基準。 (此製品為SG基準A車合格品。)

適 用 範 圍	此婴幼兒手推車限寶寶一人乘坐,提供戶外、購物等一般家庭親子移動 上的使用。
車 種 的 形 式	A車 出生後一個月* 頸椎尚未發育完成的嬰幼兒, 採取平躺姿勢使用的嬰幼兒手推車。
適用年齡	出生後1個月至36個月以內
建議連續使用時間	平躺姿勢: 2小時以內 坐立姿勢: 1小時以內
平 躺 角 度	150°以上
車 輪 外 徑	115mm以上

※此處所稱出生後1個月,是指懷孕调數37週以上,且出生時之體重滿2.5kg以上,出生後1個月之嬰幼兒。

關於本書的標示

○「**警告**」、「注意」、「禁止」等符號是預測您未遵守注意事項的情況下,依據危害、損害的 嚴重性來作區分。標示所表示的內容十分重要,請您務必遵守。

標示	標 示 之 內 容	
⚠警告	使用方法錯誤時,可能會造成人員死亡或重傷等情形。	
⚠注意	使用方法錯誤時,可能會造成人員受傷、使物品損壞等情形。	

禁止		標	示	之	意	義	
0	請勿操作本說明書所禁止的行為。						



使用產品時的便利小建議。

使用上請注意

〇為避免意外事故發生,使用前請務必詳閱使用説明書,並且正確地使用。

○使用方法錯誤時,可能會造成人員死亡或重傷等情形。

因恐暫實有不慎掉落的危險。

請務必將安全肩帶、安全腰帶 以及立體式股帶繋好再使用。



請勿讓寶寶站立於嬰幼兒手推 車上。



安全腰帶若有鬆脫,因恐會會站起來並且 不慎造成跌倒或掉落等危險發生。

請勿讓寶寶離開您的視線。即 使繫上安全帶, 寶寶仍然可能 會站起來。請依寶寶成長狀態 調節安全腰帶。



因恐嬰幼兒手推車的車輪掉落於路面上的溝內, 而使得嬰幼兒手推車失去平衡並且不慎造成寶寶 及使用者受傷等危險發生。

當遇到有格子狀排水溝蓋的道 路且必要通過的情況下,請先 確認嬰幼兒手推車的車輪寬度 是否適合。如果適合,請慢慢 且仔細地推行嬰幼兒手推車。

車舉高。



在坡道等地方,嬰幼兒手推車因恐白行 滑動、翻覆。

常寶寶乘坐時或離座時,請務 心將車輪煞車器左右兩邊同時 鎖上,並確認嬰幼兒手推車不 會滑動。



當寶寶乘坐或置放物品時,請 勿過度相信煞車器。因路面狀 態、構造功能及耐久性等之不 同,因此煞車器未必能絕對煞 住嬰幼兒手推車。



即使鎖上煞車器,也請勿讓寶 寶離開您的視線範圍,獨留於 手推 重內。



因恐失去平衡、看不到路面情況,而 有導致摔倒之虛。

常寶寶乘坐時,請勿直接將嬰 幼兒手推車提起懸空。



〈接下一頁〉

用

前

因恐嬰幼兒手推車翻覆,而使寶寶摔落受傷之虛。



因恐嬰幼兒手推車收折時,而使寶寶有摔落、夾 傷之虛。

使用嬰幼兒手推审前,請 確認左右開關鎖扣是否完 全扣住。



完全扣至下 方的狀態

請勿在樓梯、手扶梯等有高低 落差的地方使用。



使用嬰幼兒手推車之前,請務 必確認安全控制鎖是否完全扣



因恐嬰幼兒手推車翻覆,而使寶寶摔落受傷之慮。




嬰幼兒手推車因恐受到路面影響使得車內的溫度 變高,導致寶寶身體受到傷害的危險。



常寶寶乘坐時,請勿在置物網 籃以外的地方放置物品,勿在 手把懸吊物品。此外,請勿倚 靠在手把上。



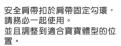




因恐導致嬰幼兒手推車破損、受傷、意外事故等 發生。

當使用嬰幼兒手推审 時,請勿過度施力。

問使用。



各可動關節部位因恐有夾傷寶寶手腳、車體撞擊寶寶或使用者本人等情況發生。

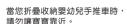



扣上開放型扶手時,請務必注 意寶寶的手腳。



因恐導致嬰幼兒手推車破損,使得寶寶或使用者受傷之虐。

- ◎請勿讓兒童操作嬰幼兒手推車。
- ○當寶寶乘坐時,請務心讓寶寶的股間對進立體式股帶的 位置。否則因恐使得嬰幼兒手推車往後翻覆之虞。
- ○本公司維修人員外,請勿自行分解、安裝或改造。
- ◎請勿在座椅縫製品拆下的狀態下使用本產品。
- ◎請勿在猛力撞擊或掉落後使用。
- ◎請勿當成兒童玩具使用。
- ◎請勿將本車用於寶寶乘坐之外的任何用途上。

∧ 注意

使用方法錯誤時,可能會造成人員受傷、使物品損壞等情形。

- ◎請務必定期檢查與保養。
- ◎使用前,請先確認嬰幼兒手推車主體與座椅縫製品 ◎請勿做出其他可能導致嬰幼兒手推車故障之行為。
- ◎請適時替可動關節部位上油,並務必使用塑膠製品 用的潤滑油。
- ○長時間未使用的嬰幼兒手推車時,請務必進行檢查 或維修後再使用。
- ◎即使是空車,也請勿將嬰幼兒手推車放置於斜坡上 或鄰沂車道的人行道等危險場所。
- ◎請勿在螺絲或螺帽鬆動的狀態下使用。
- ◎請勿將兩輛手推車併在一起使用。
- ◎請勿將前輪呈高舉狀態行走。因恐浩成後部框架響 ◎在電車等場所使用時,請勿強行上下車。 曲變形或斷裂。
- ◎當寶寶乘坐於嬰幼兒手推車並且在行進中時,為了 寶寶的安全,請以一般的步行速度行進(時速約4公 ◎請勿在積雪處或是結霜的路面上使用。 里左右的速度)。
- ◎請勿將嬰幼兒手推車推至沙地或泥濘處。
- (關節轉折處易因沙粒進入導致開關收納困難。) ◎框架處沾染沙粒或泥土時請勿置之不理。
 - (關節滑動處易因沙粒進入導致開關收納困難。)
- ◎嬰幼兒手推車是為了讓寶寶乘坐。避免造成損壞, 請勿加裝任何市售零件。
- ◎請勿在置物籃放入重量5kg以上的物品。
- ◎家長、照護者請勿倚靠在嬰幼兒手推車上。
- ◎請勿用來搬運物品等。

- ◎本產品僅限於嬰幼兒乘坐。
- ◎請勿在公車上使用。
- 本產品之設計,並非以公車上使用為目的。若在公 車上使用本產品,因恐轉彎、緊急煞車等原因,而 有發生翻覆或意外事故之處。
- ◎雷車上使用的注意事項。
- 本產品之設計,並非以電車上使用為目的。於電車 中使用本產品,恐因轉彎或緊急煞車等情況而有翻 覆之虞,因此請務必使用煞車器,並盡充分之注意 ,若發生意外,責任由使用者自行承擔。
- 嬰幼兒手推車即使被電車的白動門夾住,也可能未 被感應到,因而有造成寶寶受傷之虐。
- ◎風勢強勁時,請勿使用。
- ◎打雷時,請勿使用。
- ○由於易導致嬰幼兒手推車車內溫度變高,故請勿在 室內、靠近火源處或高溫場所等地方使用遮雨罩。
- ◎由於易造成塑膠部分變形而無法維持其原有功能, 故請勿放置靠近火源處或炎夏高溫車內。

○請勿勉強越渦高低落差的地面。以免造成損壞或故障。 〈越過高低落差地面的方法〉

面對面的場合使用下,腳 踩在手推車的腳踏板上, 將手把向下輕壓,讓手推 車越過段差處。



背面的場合使用下,將手 把向下輕壓,同時抬起安 全扶手,讓手推車越過段 差處。



製品取出時

- ○製品取出時,請務必進行各部位檢查工作。
- ○部品有缺少、弄錯或者破損時,請與經銷商或者進口商連絡。(請參閱封底「產品保證書」)


--- 1322

○從箱子裡取出時,本產品處於折疊狀態。嬰幼兒手推車的開啟方法,請參閱P7。

○製品取出時。

前、後輪的車輪煞車器皆為鎖定狀態。

使用前,請將手動車輪固定器、車輪煞車器於先解除鎖定狀態。(請參閱P12)

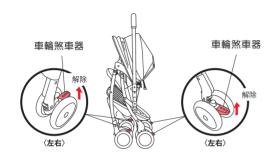

<u></u> **企注意**

○使用前,請先解除鎖定狀態。(請參閱P11、12)

附屬品





預防呼吸道閉塞型 保護頭墊

腰部•臀部守護墊

使用說明書

企警告

〇請勿將產品包裝箱、捆包材料、塑膠袋放置於實實伸手可及之處。否則恐導致實實將其套在頭上而 窒息。

〈製品特徴〉

- ○手把是背對、正對兩用型。
- ○前後收折方式。


- ○車體在折疊狀態可自行站立。
- ○框架使用的是輕量鋁管。

各部位名稱《產品與圖示如有不同·請以實品為主》 (五點式成長型安全帶) ○五點式成長型安全帶為安全肩 帶、安全腰帶、立體式股帶的 安全控制鎖 遮陽篷 安全肩帶 安全腰帶 座椅 手把控制鈕 縫製品 立體式股帶、股帶扣組 預防呼吸道閉塞型 保護頭墊 扶手保護套 安全肩帶導孔 按鈕式開放型扶手 雙向手把切換拉柄 扶手按鈕 安全扶手 立體式股帶 開關鎖扣 雙腳支撐架 車輪煞車器 腰部 • 臀部守護墊 腳踏板 置物網籃 車輪煞車器 手動車輪固定器 座椅護套 彈簧座管 (前後左右) 〈靠背背面〉 車體型號記載處 (品名、型號、批號) 無段式平躺支撐帶 無段式平躺調節器 無段式平躺調節帶

- ○當寶寶碰觸手推車或靠近手推車時,請勿收折或打開車體。因恐可動關節部位夾到寶寶手指、手腳或 是嬰幼兒手推車碰撞寶寶身體,而使寶寶有受傷之虞。
- ○請勿讓兒童操作嬰幼兒手推車。因恐導致跌倒或意外事故發生等危險。

小叮嚀 ○因捆包装箱的關係,初次使用可能無法順利開啟的情況發生。請重複操作2~3次後再進行開啟。

〈解除安全控制鎖〉

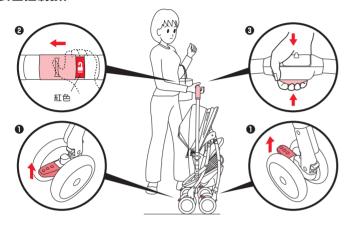

- ●將車輪煞車器解除鎖定。(請參閱P12)
- (顯示出紅色部分)

❸施力於手把中央部位,將手把控制鈕 ❷將控制開關往左橫推,解除安全控制鎖。 向上押。


〈打開嬰幼兒手推車〉



4 握住手把往後方放倒。




⑤ 將手把往自己身體方向拉開。

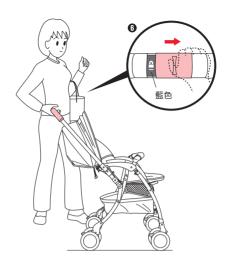


⑥將手把控制鈕上鎖。



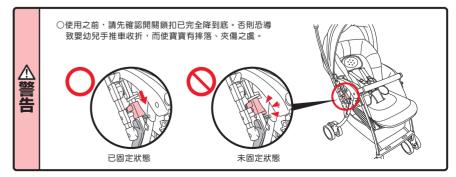

- ○進行切換手把時,請務必解除行進方向前側的手動車輪固定器(左右)。若未解除的話,推車者位置 的車輪即不會自動鎖上,因恐有使嬰幼兒手推車翻覆,使寶寶摔落之虞。
- ○請勿在嬰幼兒手推車未完全開啟的狀態下切換手把。
- 〇未依行進的方向往前推行(意即向後反推),可能形成車輪內八或外八之現象,此屬於結構正常狀態 並非車輪品質不良。

〈準備切換手把的確認〉

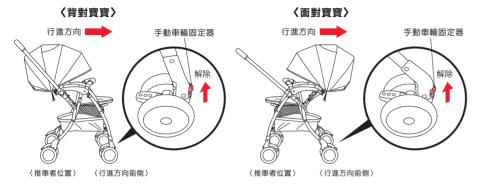


- ·請確認**行進方向前側**的手動車輪固定器已經解除鎖定。
- ·請確認嬰幼兒手推車已完全展開。(請參閱P8)

〈手把由背面切換至面對面時〉



- ○切換手把時,注意避免夾到寶寶的手指或手腳。
- ○請勿在坡道切換手把。嬰幼兒手推車可能會意外滑動、翻覆,而使實實摔落
- ○請勿一邊推著嬰幼兒手推車,一邊切換手把。
- 〇將手把由「背面切換至面對面」、或由「面對面切換至背面」後,請確認左右側的雙向手把切換拉柄
- 已確實扣上卡榫,並上下晃動手把,以確認處於鎖定狀態。因恐嬰幼兒手推車翻覆。

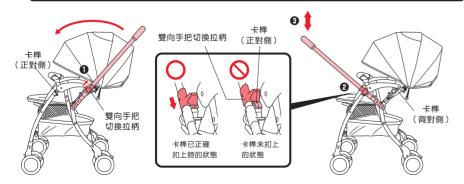


- ●一邊將雙向手把切換拉柄(左右)往 上拉,一邊切換手把的方向。
- 2雙向手把切換拉柄扣上卡榫。(左右)
- 3將手把上下動一動,確認已扣上卡榫。
- · 本插圖以背面切換到面對面的手柄轉換為示範, 但在面對面切換時請執行相同的步驟並檢查鎖定。

〈四輪自動定位導向系統(Auto四輪)切換鎖定功能〉

- 本產品可將雙向手把切換拉柄切換至手推車的背面或對面。
- 無論手把在嬰幼兒手推車的背面或對面狀態下,當切換雙向手把切換拉柄之後,後車輪會自 動上鎖。靠近**推車者位置的車輪**(後輪)即自動地鎖上,而**行進方向前側**(前輪)的車輪即 解除鎖定(Free)。**行進方向前側**(前輪)的車輪解除鎖定後,即可靈活地轉換方向。

〈背面〉 站在寶寶後方的位置

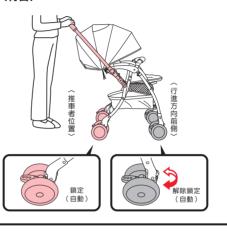

〈對而〉 站在面對著寶寶的位置



〈鎖定推車者的左右方車輪(自動)〉

〈背面的場合〉



〈對面的場合〉



- · 將嬰幼兒手推車往行進方向稍微前進, 使得靠近**推車者位置**的左右車輪鎖上。
- · 手把在切換中或切換之後,因為所有的車輪都處於未鎖上的狀態,因此務必像上述一樣,使靠近 推車者位置的車輪朝向推車者,並且確認已確實鎖上。

嬰幼兒手推車的使用方法

〈手動車輪固定器的錯誤使用方法〉

〈背對寶寶〉



〈面對寶寶〉



- ·正確的車輪方向請參閱P10。
- ·推車者位置的左右車輪朝內鎖上時,請解除前後左右的手動迴轉固定器之後,再進行操作 手把切換的動作。

〈往後方移動時〉

嬰幼兒手推車的

使用方法



〇上下電梯或電車等人多擁擠時,需要將推車往後 方移動時,因**椎車者位置的車輪**是處於鎖定狀 態,有時會影響推車的移動。此時建議輕微的提 起推車的扶手把**讓靠近推車者位置的車輪輕微離 開地面**後再移動車身。

手動車輪固定器的使用方法

行推方向 行進方向 ■ 鎖定 鎖定 手動車輪固定器 手動車輪固定器

〈鎖定〉

- ○在凸凹不平、坡道、傾斜地面等 場所行進時,暫時先將**行進方向** 前側(左右2處)的車輪鎖上, 這樣能使手推車比較好推。
- ●將**行進方向前側**的手動車輪固定 器往下扳,鎖定重輪。(左右)

〈解除〉

- ○平常請在解除狀態下使用。
- ●將**行進方向前側**的手動車輪固定 器往上扳,解除鎖定狀態。(左
- ○推車者位置的車輪會自動鎖上。 無法使用手動車輪固定器。

車輪煞車器的使用方法



- ○當寶寶乘坐時或離座時,務必將左右煞車器都鎖上。
- ○當寶寶乘坐在手推車上時,請勿渦度相信煞車器。因路面狀態、構造功能及耐久性等之不同,有可能 煞車器未必能絕對停住嬰幼兒手推車。
- ○即使鎖上車輪煞車器,當寶寶乘坐在手推車上時,仍然請勿離開寶寶的身邊。



○即使寶寶未乘坐在手推車上,當要離開嬰幼兒手推車時,仍然請將左右車輪煞車器都鎖上。

〈鎖定〉



- 將推車者位置的車輪煞車器往下扳,即可 鎖上車輪。(左右)
- ※ 將手推車前後動一動,以確認車輪煞車器 已鎖上。



○若車輪煞車器難以鎖上時,請將嬰幼兒手推車前 建議後來回推動之後,再一次鎖上。


〈解除〉



●將車輪煞車器往上扳,解除鎖定狀態。 (左右)

○若手動鎖上或解除車 輪煞車時,請注意手 指。因恐不慎被紅色 箭頭處夾傷。



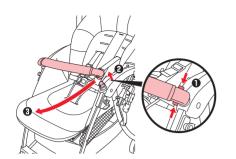


- ●按住開放型扶手的鎖定紐的內外兩端。
- 2將開放型扶手往前拔出。
- ❸將開放型扶手往下放。



- 〇扣合扶手時,請注意避免手指被開關
- ○請勿打開開放式扶手,將已乘坐寶寶 的推重抬起或拉動。

雙腳支撐架的使用方法

○當座椅角度在平躺狀態時,請使用雙腳支撐架。

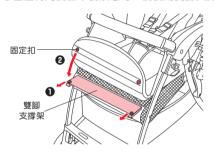

- 坐席座部向上翻起,將雙腳支撐架拉出。
- ❷ 將坐席內側的固定扣扣在雙腳支撐架前端 的固定扣上。

置物籃的使用方法



- ○請勿將形狀銳利的物品置於置物籃內。否則可能會破壞置物籃。
- ○請勿置入重量5kg以上的物品。
- ○收折嬰幼兒手推車之前,請先將物品取出。



- ○請從置物籃的上方收放物品。

(○) ○放置物品時,請盡量使物品的重量平均分散 建議 於置物籃底。

守護墊類的安裝方法

○守護墊類在嬰幼兒手推車內,用來輔助寶寶維持適當正確的姿勢。

預防呼吸道閉塞型保護頭墊 頸部開始安定之際,請務必使用。(約四個月左右)

○安裝預防呼吸道閉塞型保護頭墊時 ,請務必將安全 = 帶安裝於下段 = 帶導孔。 最高月齡使用至7個月為止。(請參閱P17「安全肩帶高度的調整方法」)




- 保護頭墊適用於平躺狀態下使用。(請參 閱P18)
- 2 將保護頭墊上的魔鬼氈白色布片取下,依 照箭頭的方向, 把魔鬼氈固定帶穿過頭墊 安裝孔,黏在坐席裏側的魔鬼氈上。



○頭墊不易安裝時,可拆下座椅縫製品的上半部, 在可看到座椅裏側的情況下來安裝。(請參閱 P23「座椅縫製品的拆卸方法」)

〈預防呼吸道閉塞型保護頭墊的安裝位置〉

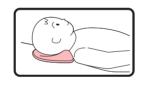


●安裝時,請讓頭墊下端的鼓起部分在寶寶的頸後。 ※當鼓起部分不適合寶寶的頸後時,請立即拆除。



- 〇安全 肩帶穿在中段、上段的 肩帶導孔時,無法使用預防呼吸道閉塞型保護頭墊。
- ○當鼓起部分不適合實實的頸後時,請立即拆除。

腰部 • 臀部守護墊 (1個月~36個月左右的寶寶可使用。)

○依寶實體格的不同,即使是36個月以下的寶寶,仍有可能已不適用腰部 • 臀部守護墊。當不適用時,請拆下。

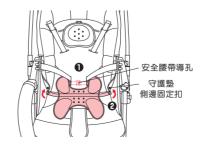

- 將上端固定帶扣穿過安全腰帶導孔,並且 扣上。
- 2 將腰部守護墊側邊的固定扣,扣在側邊的 固定扣上。(左右)

13

嬰幼兒手推車的使用方法

進 備




- ●鎖上車輪煞車器。(左右)
- 2 打開按鈕式開放型扶手。(請參閱P13) ○按住鎖定鈕的內外兩端,打開開放型扶 手。
- **8**解開安全 信帶、安全 腰帶。
- ○按下立體式股帶的固定扣組,解開安全 腰帶、安全盾帶。
- ○安全肩帶白肩帶固定勾環取出。
- ○需要改變安全肩帶的位置時,請參閱P17 ·安全肩帶高度的調整方法 . 。
- ○需要改變座椅的角度時,請參閱P18「無 段式平躺調節器的使用方法」。
- ○需使用雙腳支撐架時,請參閱P13「雙腳 支撐架的使用方法」。


乘坐方法

〈寶寶乘坐之後,務必繫上安全帶〉



肩帶固定勾環 安全肩帶

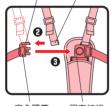

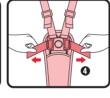

安全腰帶 固定扣組

- 先讓寶寶乘坐於嬰幼兒手推車上。
- 将安全肩帶扣入肩帶固定勾環。
- 3 將安全腰帶扣入固定扣組。
- 4 將安全腰帶往兩側拉,調節至適合實實的 實鬆度。
 - ※請依寶寶的成長情況來調整安全肩帶、 安全腰帶、立體式股帶。請參閱P16



注

- ○安裝安全肩帶時,警告標籤應朝向外側。
- ○請確認安全肩帶沒有扭結的情況。

○繫上安全帶後,請確認左右兩側的安全腰帶有 調節至適合實實的實懸度。

- ○使用時,務必將安全肩帶扣在肩帶固定勾環上 因恐安全肩帶可能會纏繞在寶寶頸部。
- ○請勿讓寶寶離開您的視線。即使繫上安全帶 寶寶仍然可能會站起來。請依寶寶成長狀態調 節安全腰帶。

安全腰帶若有鬆脫,因恐寶寶站起來並且不慎 造成跌倒或掉落等危險發生。

○ 實育乘坐時,應該讓實育的股間對準立體式股 帶的位置。否則嬰幼兒手推車有可能會往後方

〈安全腰帶的調整〉






○安全腰帶的長度,以安全腰帶與寶寶之間 可容納成人4隻手指頭的寬鬆度為適當。

●輕押安全腰帶調節扣,拉安全腰帶做調整。

〈安全盾帶的調整〉

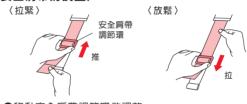

●移動安全盾帶調節環做調整。



○安全肩帶的長度,以安全肩帶與寶寶之間 可容納成人1隻手指頭的寬鬆度為適當。

〈立體式股帶的調整〉



- ●解開固定扣組與股帶保護套之間的 固定扣。
- 2 立體式股帶取出。
- ❸股帶拉出,調整長度。
 - ○調整之後,請務必確認固定扣組 與股帶保護套之間的固定扣已經 扣上。

- ○請依實實的成長情況來調整安全肩帶、安全腰帶、立體式股帶。
- 安全層帶、安全腰帶、立體式股帶渦鬆時,即使擊上安全帶,實實仍然可能站起來,而使實實有摔
- ○關閉開放型扶手時,請注意避免夾到寶寶的手指。
- ○關閉開放型扶手後,請拉拉看,以確認開放型扶手已確實鎖上。
- ○當寶寶乘坐在手推車上時,請勿舉起開放型扶手。
- ○安全腰帶的尾端(插圖中 ◆ 的部分), 務必保留3cm以上。
- ○調整座椅靠背的角度時,應一併調整安全肩帶、安全腰帶、立體式股帶的長度。

〈關閉按鈕式開放型扶手〉




〈解除車輪煞車器〉



○請依寶寶的成長情況,調整安全肩帶的高度。

〈安全信帶的位置〉

○製品從包裝箱取出時,安全 **启帶位置設定於下段。**

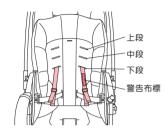

〈安全肩帶的使用標準〉

○穿過肩膀位置下段 的安全盾帶導孔。

○安全 后帶的位置, 請依以下3段 標準進行調整。



月齡(體格)的標準	安全肩帶導孔的位置
18個月~36個月	上 段
7個月~18個月	中 段
1個月~7個月	下 段


請依個別差異對照上述表示的標準進行調整。




- ○安裝安全肩帶時,警告布標應朝向外側。
- ○請確認安全肩帶沒有扭結的情況。

〈安全肩帶的高度調整方法〉


- ○將安全肩帶、安全腰帶,從固定扣組上解開。(請參閱P15)
- ○解開靠背側邊的固定扣,掀開坐席。(請參閱P23)

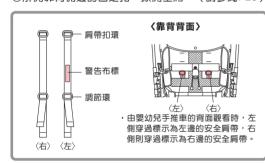

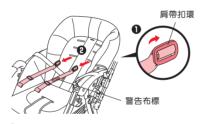

- 將安全肩帶扣環轉換與肩帶平行的方向。
- 2 將安全肩帶環穿過坐席導孔以及背板導孔。

〈使用上段遵孔時〉

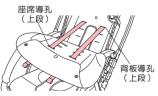

〈使用中段遵孔時〉

〈使用下段導孔時〉





- ●穿過坐席導孔(上段)與背 板導孔(上段)。
- ●穿過坐席導孔(中段)與 背板導乳(中段)。
- ●穿過坐席導孔(下段)與背板 遵乳(下段)。
- ○調整之後,請務此確認固定扣組與股帶保護套之間的固定扣已經扣上。(請參閱P24)
- ○將安全肩帶扣入肩帶固定勾環。

無段式平躺角度調節器的使用方法

- ○無段式平躺調整器的主要機能為支撑寶寶維持在舒適的姿勢。
- ○靠背平躺的狀態是為了讓寶寶乘坐時也能夠平躺所設計。
- ○靠背平躺時,頭枕即立起。

〈座椅的角度標準〉

月齡(體格)的標準	椅背的角度位置
1個月~頸椎成熟	平躺
頸椎成熟~可獨立坐立	平躺~半躺(中間位置)
可獨立坐立	平躺~坐立姿勢

靠背平躺時

·放鬆安全盾帶。(請參閱P16)









- 躺角度調節器。
- 用單手扶住實實,另一手拉住無段式平 ② 一邊拉著拉環,一邊將靠背往後倒,調整至適當的 **鱼度**。
 - ・調整靠背後,請調整安全 肩帶、安全腰帶的長度。(請參閱P16)



- ○在寶寶乘坐的狀態下,若要將靠背倒下時,請先鬆開安全層帶。
- ○椅背角度調整完成後,接著調整安全層帶、安全腰帶的長度。安全層帶、安全腰帶渦鬆的話,即使整 上安全帶,寶寶仍然可能站起來,因而使得寶寶有摔落之處。



- ○請勿一邊推著嬰幼兒手推車,一邊調整椅背角度。
- () 在寶寶乘坐的狀態下,若要調整椅背角度時,請勿急速日大幅度的改變角度
- ○在寶寶乘坐的狀態下,若要將靠背倒下時,請確實扶住寶寶。
- 〇無法獨立坐立的寶寶,請使用椅背平躺的方式。



○可獨立坐立的寶寶,將頭置於頭枕的位置時,若將靠背倒下,寶寶的姿勢將 會變得不自然,因此請將椅背角度調整在頭枕不會立起的位置。




靠背立起時



- ●請在寶寶不完全倚靠靠背支撐的狀態下, 單手握住無段式平躺調整帶並且往上拉即 可將座椅靠背立起。
- ○當寶寶完全依靠靠背支撐的狀態下,請勿豎 起靠背。

嬰幼兒手推車的使用方法

○請在實實未接觸遮陽篷的狀態下,才進行遮陽篷開啟或收起的操作。 否則可動關節部位可能會來到實實的手指或手。

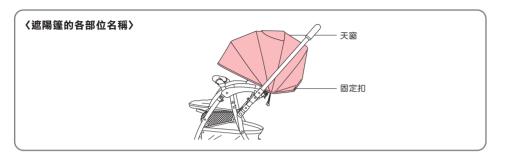

遮陽篷前端的收納方法



○將遮陽篷前端處向遮陽篷的內部收折。

打開方法



○將遮陽篷往前展開。

靠背調整為平躺時



○靠背往後躺時,將遮陽篷固定扣扣住 在頭枕後側的固定扣上。(左右)

收起方法



○將遮陽篷往後收起。

天窗的開啟方法



○開啟遮陽篷的窗罩,可看到寶寶的一舉 一動。

嬰幼兒手推車的使用方法

企警


- ○當實實碰觸手推車或靠近手推車時,請勿收折或打開車體。恐因可動關節部位夾到實實手、腳,或因 嬰幼兒手推車碰撞實實身體,而使實實有受傷之虞。
- ○請勿讓孩童操作嬰幼兒手推車。因恐造成翻覆、意外事物,而有受傷之虛。



〇請先將安全肩帶、安全腰帶插入安全股帶扣後,再收折嬰幼兒手推車。否則恐有使安全股帶扣破損之 虞。

小叮嚀

○因梱包裝箱的關係,剛開始使用可能有不易收開的情況。請重複操作2~3次。

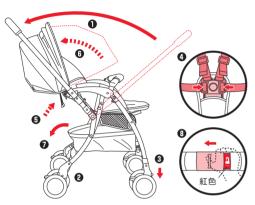


〈收折之前〉

- 將手把切換至背面。(請參閱P9、10)
- ②請稍微往前進,確認推車者位置的車輪 已自動鎖上。(請參閱P10)
- ③ 將前側左右兩邊的車輪上鎖。(請參閱 P12)
- ◆ 將安全肩帶、安全腰帶,扣入安全股帶 扣組。(請參閱P15)
- **⑤** 豎直靠背。(請參閱P18)
- 6 收起遮陽篷。 (請參閱P19)
- 7 置物籃裡的物品取出。
- 3 往左橫推,解除安全控制鎖。
 - (图 顯示出紅色部分)



〈解除安全控制鎖〉

節 施力於手把中央部位,將手把控制鈕向上押。

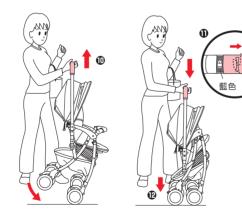


〈收折方法〉

- 纖續握著,將手把往上提。然後將車體稍微前傾並且 將手把往下押即可收折完畢。
- ❶ 鎖上安全控制鎖。(■ 顯示出紅色部分)
- ❷將推車者位置的車輪煞車器上鎖。(請參閱P12)




○若無法以單手操作時,請用另一隻手提起開放型扶手折疊。

遮陽篷的拆卸方法

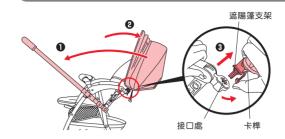


- ●將手把切換至對面。(請參閱P9)
- ②收起源陽篷。(請參閱P19)
- ❸拉起左右兩邊卡榫下側的突起處向後輕扳即可自接口處拔出。

扶手保護套的拆卸方法

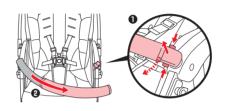

- ●打開開放型扶手。
- 2取出扶手保護套。

置物網籃的拆卸方法

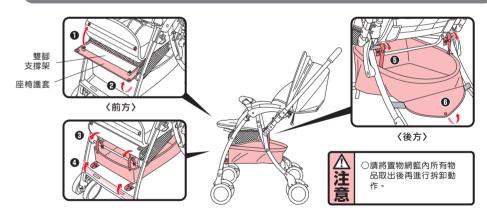

- ●解開雙腳支撐架的固定扣。(左右)
- ❷解開座椅護套的固定扣並將座椅護套向 上翻開。(左右)
- ❸解開置物籃前方穿過固定環的固定扣。 (左右)
- ○安裝時請以相反步驟進行即可。
- ※有關座椅護套的安裝,請參閱右圖。
- ①用指尖將前腳管前端的座椅護套的一端包覆彈簧座管。 (左右)


- 母 解開置物籃前方下面的固定扣。(左右)
- **5**解開後方的固定扣。(左右)
- 6 解開置物籃包覆車架的固定扣。




座椅護套完整包覆前 腳管的彈簧座管。 座椅護套 彈簧座管 座椅護套的後側沒有 完全包覆彈簧座管。

幼兒手推車的使用

方法

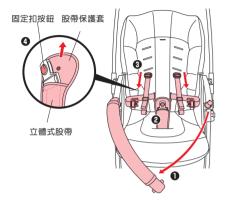


- ●打開按鈕式開放型扶手。
- ②按下固定扣按扭,解開安全肩帶及安全腰帶。
- ❸拉出安全肩帶。(請參閱P17**❶②**)
- 4將固定扣內側與股帶保護套的固定扣解開。

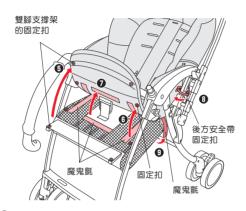

- 解開雙腳支撐架的固定扣。(2處) (當雙腳支撐架有使用時)
- ❸解開座椅縫製品下方的固定扣。(2處)
- ₹ 解開座椅縫製品下方的魔鬼氈。(3處)
- 8 將座椅兩側後方的安全帶固定扣解開。(2處)
- 9解開座椅縫製品下方兩側的魔鬼氈。(2處)

上方安全帶固定扣下方安全帶固定扣

- 解開座椅兩側的固定扣。(4處)
- ❷解開上方的安全帶固定扣後抽出。(2處)
- 酚解開下方的安全帶固定扣後抽出。(2處)

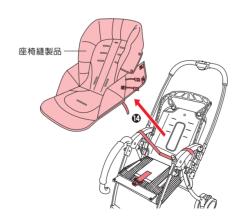

●將安全肩帶、安全腰帶取出後,即可取下座椅 縫製品。

座椅縫製品的安裝方法



- ●將立體式股帶與安全腰帶穿過導孔,裝上座 椅縫製品。
- ❷將立體式股帶套上股帶保護套,將固定扣內 側與股帶保護套的固定扣扣上。 股帶保護套的前端應穿出座椅的內側。




- ◆穿過下方安全帶固定扣後,扣上固定扣。 (2点)
- ⑤將靠背背面的固定扣扣上。


上方安全帶

固定扣

6將座椅兩側的固定扣扣上。(4處)

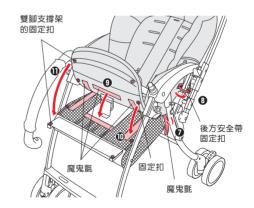

- **②**將座椅縫製品內側的魔鬼氈黏上。(2處)
- ❸扣上座椅兩側的後方安全帶固定扣。(2處)
- ⑨將座椅縫製品下方的魔鬼氈黏上。(3處)
- ⑩扣上座椅縫製品下方的固定扣。(2處)
- ●扣上雙腳支撐架的固定扣。(2處) (若有需要使用雙腳支撐架時)
- ・置物籃、陽篷的安裝。(請參閱P22)

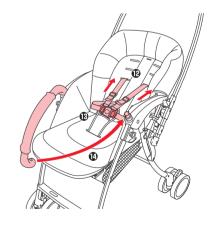

- **②**安裝安全肩帶。(請參閱P17**●②**)
- ⑤將安全肩帶及腰帶扣入立體式股帶扣座。
- 12 扣上按鈕式開放型扶手。

く座椅縫製品、扶手保

〈座椅縫製品、扶手保護套、股帶保護套、預防呼吸道閉塞型保護頭墊、腰部·臀部守護墊的清洗方法〉

○清洗時,請注意以下事項。





- ○請不要使用鹼性清潔劑、酸性清潔劑以及含氯漂白劑。
- ○若要將縫製品晾曬於室外時,請於陰涼處平放晾乾。

〈遮陽篷、安全肩帶、安全腰帶、立體式股帶、置物籃的清洗方法〉

- ○請勿整件放進洗衣機裡清洗,請按照下述要領清洗。
- ●水溶性污垢(如果汁、唾液、尿液等)的情況:用40度左右的熱水將毛巾浸濕,輕輕擰乾後充分擦拭污垢處。再以乾毛巾充分擦拭水份後再置於陰涼處自然晾乾。
- ●非水溶性污垢(如牛奶、油脂、沙拉醬等)的情況:首先將中性洗潔劑溶解在40度左右的熱水中,再使用刷子或海綿輕輕刷洗污垢處。再用冷水或溫水洗掉中性洗潔劑,用乾毛巾充分擦拭水份後置於陰涼處自然晾乾。



○若發現縫製品產生破損或異常現象,請立即停止使用,並請務必要聯繫維修中心進行檢查及維修。

車體的保養

〈框架及車輪的保養方法〉

○請勿對黏附在車輪上的泥土、灰塵等置之不理。務必使用濕毛巾等物品擦拭乾淨。



- ○車架及車輪黏附泥土及灰塵時容易發生故障,故發現此情況時請停止使用。
- ○擦拭泥土及灰塵時請勿使用稀釋液或揮發油等有揮發性的溶劑。
- ○車輪屬於消耗品。當車輪的厚度磨損掉了5mm左右時,請向本公司維修中心聯繫更換。(須支付費用)

〈螺絲、螺帽類的保養〉

○請經常檢查螺絲、螺帽是否有鬆動,當發現鬆動時請盡速鎖緊。


〈按鈕式開放型扶手的保養〉

○當發現開放型扶手與車台連接處有灰塵時,請使用乾毛巾擦拭。

〈添加潤滑油〉

- ○請適時地在可動關節部位注入潤滑油。並請使用塑膠用的潤滑油。
- ○在注油之前,請先去除泥土及灰塵,並將水分擦拭乾淨。
- ○注油時,請在每個部位注入2~3滴左右。

●若無法順利折疊展開車體,且無法順利回轉迴轉固定器以及車輪與車體產生聲響,請在上圖 → 箭頭處添加市售塑膠用潤滑油,再重複開閉動作2~3次即可。

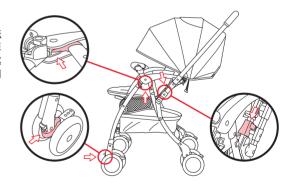

○按鈕式開放型扶手與車台連接處的附近及內部請勿使用潤滑油 避免解開按鈕式開放型扶手時實實有掉落的危險。



日常簡易保養

覺得故障嗎?送修前先確認

○倘若採取以下的方法卻仍無法解決問題時,請與本公司維修中心連絡。(請參閱P29)

〈使用中發現問題時〉

問題	處理方法
手把控制鈕無法操作時	請先解除安全控制鎖之後再操作一次。(請參閱P7)
車輪無法迴轉時	請將左右兩邊的手動車輸固定器一併解除。(請參閱P12)
車輪的轉動不靈活時	請在車輸注入潤滑油。(請參閱P26)
後輪煞車器失靈時	請先將嬰幼兒手推車稍微往前移動之後,再將車輪煞車器上鎖。 請確認後輪煞車器部位是否夾到碎石等異物。
手把無法切換時	請先確認車體已完全開啟,開關鎖扣已完全降到底。(請參閱P8) 請先解除手把的左右安全控制鎖之後,再進行切換。(請參閱P9)
靠背無法豎直時	請先將實實抱離嬰幼兒手推車,然後拉動無段式平躺角度調節帶。 (請參閱P18)
嬰幼兒手推車無法開啟時	請確認座椅布料是否有被安全扶手等車體車架夾住。
安全肩帶無法插入安全腰帶時	請確認是否夾到衣物或安全帶。
上下電梯或電車等人多擁擠時,需要將 推車往後方移動時	請先輕微的提起推車的扶手把,讓靠近推車者位置的車輪輕微離開地面 後再移動車身。
切換手把後,靠近推車者側的車輪呈現 傾斜狀態,而難以推動嬰幼兒手推車時	確認推車者側的車輪是否有上鎖,若已上鎖時請將手動車輪固定器往上 撥,以解除鎖定。
輸胎磨損時	輸胎的厚度低於5mm時,即需更換。 請與本公司維修中心連絡。(請參閱P29)

〈使用二手品〉

問題	處理方法
不了解之前的使用者是如何使用	對於使用狀態不明的商品,不建議使用。
嬰幼兒手推車出現裂痕或重大損傷時	切勿使用。

保管方法

- ○請將主體放入塑膠袋內,保管在沒有陽光直射的陰涼場所。
- ○請勿在上面放置重物、施加壓力的狀態下保管。恐造成故障或變形。



- ○為避免遮陽篷變形,請勿橫倒手推車或放置重物在車上。且避免放置在高溫的場所裡做保管。
- ○請勿置於火源附近、勿在大熱天下放置於高溫車內。恐易使塑膠零件變形、無法維持性能。


廢棄方法

- ○請依照各區域的廢棄物處理方式做處理。
- ○為維護地球環境,請勿隨意放置丟棄。

〇於品質保證期間內(自購買日起1年內),由於零件短少、加工不良等可歸責於本公司者、依照使用說明書及注意事項而在正常使用狀態下故障者,根據保固規定提供免費修繕服務。自購買日起已超過3年之產品,雖仍受理修理,但產品修理部位以外之品質,則恕不保證。此外,已停產之產品,可能因修理所需零件已無庫存而無法修理。(零件之保有期間為停產後3年期間。即使於3年內,零件之顏色、布料之花樣等方面,亦有可能無法符合您所指定的,敬請見諒。)

〈售後服務事宜〉

- ○使用中發生故障等情況,或檢查中發現時,需要更換零件或修理時,各部位之固定部位發生鬆動或異音、零件缺損或車輪轉動有異常時,以及感覺到其他異常時,請停止使用,並確認產品名稱、型號、批號(參考下圖)後,向本公司維修中心聯絡。
- ○聯絡時,請務必告知本產品腳管之品名、型號、批號,以利進行後續處理作業。

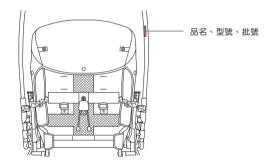


維修服務中心聯絡方式

台灣愛普力卡股份有限公司 維修服務中心

連絡電話: (03) 6561261

服務地址:新竹縣竹北市福興路885號

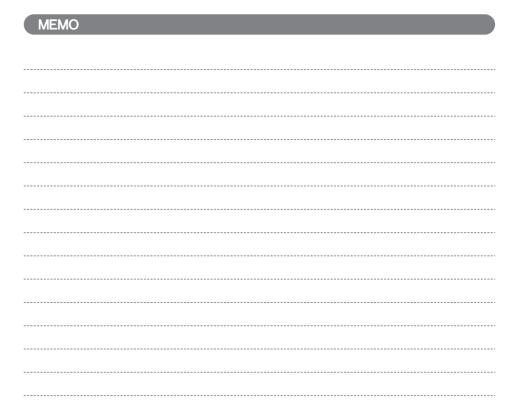





LUXUNA Cushion

ラクーナ クッション

User Manual

Thank you for purchasing this product.
This product is suitable for babies 1 month to 36 months old, and under 15 kg.

** One month old after birth, in this manual, refers to babies following 37 weeks of pregnancies, birth weight over 2.5 kg, and older than one month.

Please carefully read this specification before use and use it correctly.

Please do not use any method except the ones specified in this specification, to operate this product, since it may not be able to maintain this product's function correctly, and is very dangerous.

Please carefully keep this book after using it.



Index

Introduction

Precautions before use
Advice for parents and guardians/About SG standards/
Markings used in this manual
Cautions regarding usage2~
Warnings/Cautions
When unpacking the product
Product features

Names of parts

How to use the baby stroller

Opening the baby stroller	7~8
Switching the handle	9~10
Using the swivels	11~12
Using the stoppers	12
Opening the front guard	13
Using the footrest support	13
Using the basket	13
Attaching the protective pads	14
Placing the baby in the baby stroller	15~16

Adjusting the shoulder belt height	17
Adjusting the recline angle	18
Jsing the sunshade	19
How to fold the baby stroller	20~21

How to remove the fabric parts

Removing the sunshade	22
Removing the front guard cover	22
Removing the basket	22
Removing the seat	23
Installing the seat	24

Care and maintenance

Daily care and maintenance	. 25~26
Troubleshooting	27
Storage	28
Disposal	28
MEMO	.29~30

Precautions before use

Suggestions

An infant is not a miniature adult, especially for the baby without a fully developed neck.

Please consider your baby's condition carefully when using a stroller.

- ①Please pay attention to the baby's condition and avoid using it continuously.
- ②Please avoid leaving baby under direct sunlight exposure; the temperature inside the stroller is higher than what adult feels outside.
- 3Please stay away from crowded areas to avoid noise and dust.
- Please slow down when going through rugged pavement, and avoid the surface that could cause vibration and impulsion.
- ⑤For a concise approach, the images or assembly used in this User Manual may not be identical to the real product, so please check with the real product for reference.

SG standard

Before Use

OThe stroller marked with SG symbol meets the following standards regulated by Japanese Product Safety Association. (This product qualifies as a SG standard A stroller.)

Range of application	This stroller is limited to one baby passenger, and is used for normal family parent and child movement such as outdoor activities or shopping.
Stroller style	A stroller Stroller for one-month-old baby whose neck is not well developed and needs to lie flat in the stroller.
Suitable age	1 month to 36 months old
Recommended continuous use time	Lie-flat: less than 2 hours Sitting posture: less than 1 hour
Lay-flat angle	More than 150°
Wheel external diameter	More than 115 mm

^{*}One month old after birth, in this manual, refers to babies following 37 weeks of pregnancies, birth weight over 2.5 kg, and older than one month.

About the labels of this book

OSymbol such as "Warning", "Caution", and "Prohibited" are used to predict the condition if you do not follow the notice items. These are divided by the damage severity. The indicated contents are very important, so you need to abide by them.

Mark	Indication
⚠ Warning	Failure to observe these instructions could lead to death or serious injury.
⚠ Caution	Failure to observe these instructions could lead to serious injury or product damage.

Prohibit	Indication
0	Please do not perform these prohibited actions.



Please note when using

OTo avoid unexpected accidents, please read this user manual carefully, and follow the instructions thoroughly.



Failure to observe these instructions could lead to death or serious injury.

To avoid the danger of the baby falling down.

Please buckle up shoulder belt, waist belt and 3D hip belt before use.



Do not let the baby stand on the stroller.



If waist belt gets loose, the baby may stand up and fall down.

Please keep an eye on the baby. Even if the seat belts are buckled up, the baby still could possible stand up, so please adjust waist belt according to the baby's developing condition.



If the wheel of stroller falls into the gutter on the pavement, the stroller will lose balance and could cause the baby or the user injury.

When roadway with latticed drainage ditch is encountered, please make sure the width of the stroller wheel is suitable.

If suitable, then slowly push stroll over.

When the front wheel gets stuck, please hold the handle with one hand and hold the stroller leg with another hand to lift the front wheel. Please do not lift the entire stroller.





When parking the stroller on a ramp area, the stroller may slide or overturn automatically.

Whether baby is in or out of the stroller, please lock the wheel brakes on both sides to make sure the stroller will not slide.



When baby or belongings are on the stroller, please do not trust brake too much, since the road surface and the duration of structural function varies, and the brake may not be able to completely stop the stroller.



Even if the brake is locked, please do not leave the baby inside the stroller and outside your range of visibility.



The stroller could lose its balance when you can not see the road condition and all over.

When the baby is in the stroller, please do not directly lift up the stroller.



Next page>

Before Use

Failure to observe these instructions could lead to death or serious injury.

Since the stroller may overturn, and injure the babv.

Please do not let two babies ride at same time or let the baby sit beside the seat cushion



Before using the stroller. please make sure the switch lock on both sides are complete locked.

Since the baby may fall down or may be



Please do not use it in a place with height differences such as stairs or escalator.



Before using the stroller, please make sure the safety control lock is completely locked.



Since the stroller may overturn, and injure the baby.

When the baby is on the stroller, please do not place materials on any place other than the storage basket. Do not hang objects on the handle, and do not lean on the handle.



The road surface may cause the temperature inside the stroller to get high and harm the baby's body.

Please do not use for a long time in high temperature or under strong sunlight.

To avoid the baby being wound up by the seatbelt and result in the danger of suffocation.

Please use shoulder belt and waist belt together, and adjust these to the positions that fit baby's figure.



It may damage the stroller, harm the baby, or cause other accidents.

Please do not push too hard when using stroller.



All movable joint of stroller may pinch the baby, and the stroller main frame may hit the baby or user.

Please keep the baby away when you are folding the stroller.



Please watch out for baby's hands and feet while installing the button-type open handle.



Failure to observe these instructions could lead to death or serious injury.

It may cause the stroller damage and hurt the baby or user.

- ODo not let a child operate the stroller.
- OWhen the baby sits in the stroller, please align baby's legs to the position of 3D hip belt to avoid stroller turning upside down or backwards.
- OAny person except our maintenance personnel should not disassemble, install or remold the stroller.
- OPlease do not use this product when seat fabric article is
- OPlease do not use this product when it has been vigorously struck or fallen down.
- OPlease do not use it as a toy.
- OPlease do not rush to get on and off the train when using in the subway.
- The train may not sense the situation when stroller is gripped by train door, and get the baby injured.

Failure to observe these instructions could lead to serious injury or product damage.

- OPlease do periodic inspections and maintenance.
- OBefore use, please make sure the mainframe and seat fabric article of the stroller are completely and correctly installed.
- OPlease periodically apply plastic-product-use oil to movable joint.
- OBefore using a stroller, which has not been used for a long time, please inspect and maintain the stroller
- OEven if baby is not on the stroller, please do not place the stroller in a dangerous area such as steep hill or sidewalk close to driveway.
- OPlease do not use the stroller when screw or screw cap is loose.
- OPlease do not combine two strollers and use them together at same time.
- OPlease do not push the stroller by lifting up the front wheel, since this may cause the rear frame to be bent and deformed or breakdown.
- OFor the baby's safety, please push the stroller at a normal walking speed (about 4 km per hour)
- OPlease do not push the stroller to sandy or muddy areas (since sand may enter the joints and cause unfolding difficulty)
- OPlease do not ignore it when the frame is contaminated with sand or mud. (since sand may enter the joints and cause unfolding difficulty)
- OA stroller is for a baby to ride on, so please do not install any extra components, sold on the market, on the stroller to avoid damage.
- OPlease do not put object over 5 kg in the basket
- OParents or quardian should not lean on the stroller.
- OPlease do not use it to move objects.

- OThis product is only used for baby's riding.
- OPlease do not do anything that could cause the stroller to breakdown.
- OPlease do not use it on a bus.

This product is not designed for using on the bus. If using on bus, turning or urgent braking of the bus may cause overturn or other accidents.

OCaution for using on subway.

This product is not designed for using on the train. If using on the train, turning or urgent braking of the train may cause overturn or other accidents, so please use the stroller brakes and pay a lot of attention to it. User will need to undertake the responsibility of any accident.

Before Use

- OPlease do not use it on snow-covered or frosty pavement.
- OPlease do not use it in strong wind.
- OPlease do not use under thunder.
- OTo avoid increasing the temperature inside the stroller, please do not use the rain shade indoor, an area close to source of ignition or high temperature
- OTo avoid deformation of plastic component and losing its original function, please do not place the stroller close to any source of ignition or inside the car with high temperature in the summer.

ODo not push the baby stroller over a place with raised elevation by force. This is to prevent damage or fault in the baby stroller. <Crossing a place with raised elevation>

In face-to-face situations. step on the pedal plate of the stroller and lightly push the handle to push the stroller over the height different area.



In back-to-face situations, push the handle lightly and lift up the safety handle at the same time to push the stroller over the height different area.



When unpacking the product


- · Please check every component when unpacking the product.
- Please contact the distributor or our company if any component is missing, mistaken, or damaged.



- · This product is folded when packed in the box.
- · Please see P7 on how to open the stroller.
- · Unpacking the product.

The front and rear stoppers are in the locked position.

Please release the front and rear stoppers before use. (See page 12)

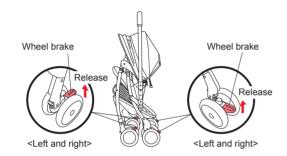



· Before use, please release the locking status. (See P12)

Accessory

Before Use



Protective head pad that prevents respiratory tract blockage (Installed on the baby stroller)



Waist and buttocks protection pad




User Manual

<Product features>

5

- · Handle is 2-way use with back-to-face and face-to-face.
- · Front-to-back folding method.
- $\boldsymbol{\cdot}$ The stroller can stand alone in folding status.
- · The frame uses a lightweight aluminum tube.

Name of Parts

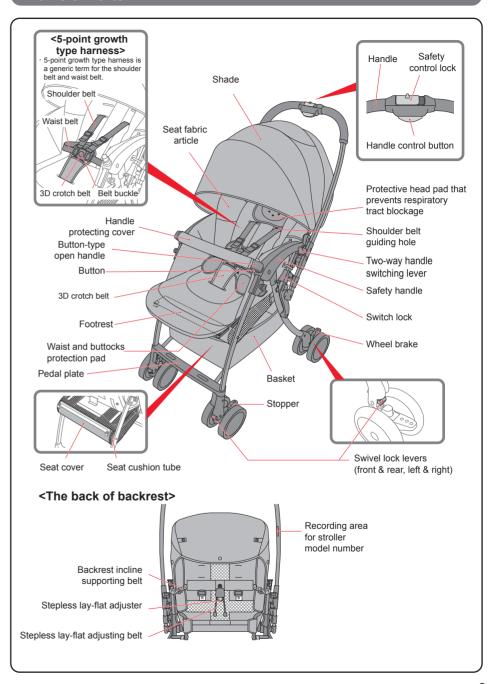


- Please do not fold or unfold the stroller when the baby touches or is close to the stroller, since the movable joint may hurt the baby's fingers, hands, or feet, or the stroller may hit the baby's body and hurt the baby. · Please do not let the child operate the stroller, since this may result in the dangers of falling down or other

Little reminder

· Since the stroller is packed inside the box, it may not be able to unfold smoothly. Please repeatedly operate 2-3 times to unfold it.

⟨Releasing the lock⟩

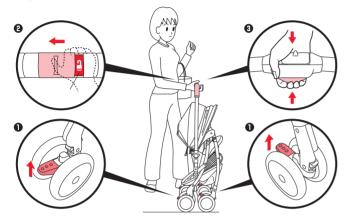

• Release the stoppers. (See page 12)

Stroller instructions

- 2Slide the handle lever lock in the direction of the arrow to release the lock. (Red colour is indicated.)
- 3 Squeeze the handle lever at the centre of the handle with an upward pressure.


⟨Opening the baby stroller⟩




AHold on to the handle and let the stroller lean backward



6 Pull the handle toward the user.

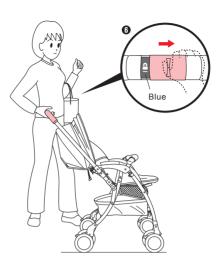

6 Lock the handle lever. (Blue colour is indicated.)

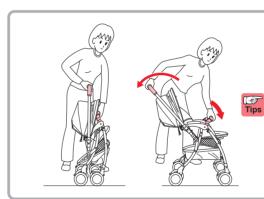

Before use, please check to make sure that the open/close lock is


· If it is difficult to unfold it with a single hand, please use another hand to hold the button-type open handle to unfold the stroller.

Warning

completely depressed. Otherwise, there may be a risk of the baby stroller folding up, causing the baby in the baby stroller to fall off or get caught in the baby stroller. Open/close lock fully depressed Open/close lock not fully depressed

- When switching the handle, be sure to unlock the swivel lock levers of the front wheels (left and right). If they are not unlocked, the wheels next to the person pushing the stroller worbe locked automatically, then the stroller and baby may fall to the ground.
- · When not pushing the baby stroller in the forward direction (ie. toward the reverse side of the moving direction), the wheels may display positive or negative camber. This is a normal structural condition and is not due to defect in wheel quality.


(Checklist when preparing to switch the handle)

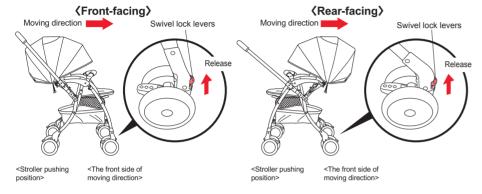

- · Be sure the swivel lock levers of the front wheels are unlocked.
- · Please ensure that stroller is open. (see P8.)




- · Watch out to avoid pinching baby's finger, hand or foot when switching the handle.
- Please do not switch the handle in a ramp, since the stroller may slide or overturn unexpectedly and cause the baby fall down.
- · Please do not switch the handle while pushing the stroller.

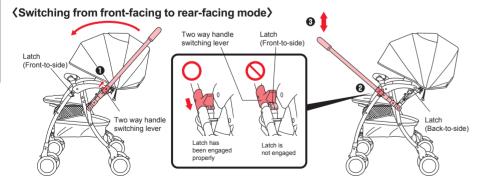


- •Pull up the two way handle switching lever (left and right) while switching the direction of the handles.
- 2Lock the latch of the two way handle switching lever.
- Move the handle up and down to ensure the latch is locked.

(About the Auto 4 Swivel function)

- · The handle of this baby stroller can be switched between rear-facing and front-facing position.
- Regardless of whether the baby stroller is front-facing or rear-facing, the swivels on the wheels which are closer to the user (rear wheels) will be automatically locked, while the swivels of the wheels on the forward side of the moving direction (front wheels) will be released. The front wheels with released swivels are free to change direction.

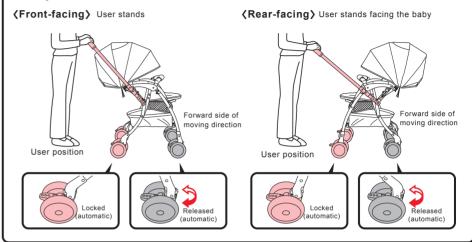

$\langle Locking \ the \ left \ and \ right \ wheels \ on \ the \ user \ side \ (automatic) \ \rangle$

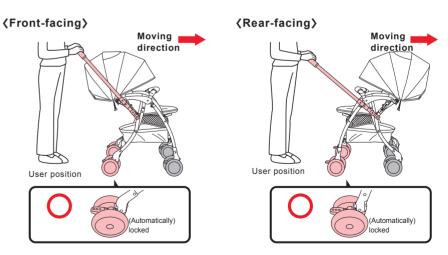

Stroller instructions

- · Please ensure that swivel lock levers on the forward side of the moving direction have been released.
- As all the wheels are not in the locked position during or immediately after handle switching, it is necessary
 to carry out to align the wheels towards the user and confirm and the swivels are locked.


Stroller instructions

9


Stroller instructions

(Incorrect way of using the swivels) (Front-facing) (Rear-facing) User position (Incorrect wheel orientation)

- \cdot Please see page 10 for the correct direction of the wheels.
- If the swivels of the wheels on the user side are locked with the wheels facing inward, please release the swivel locks on all four wheels before switching the handle.

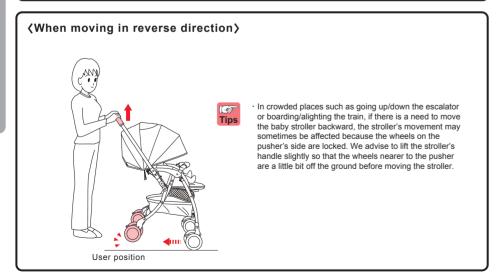

Using the swivels

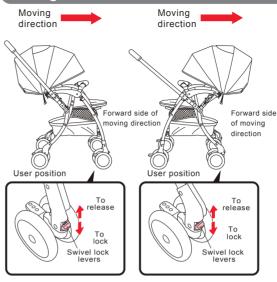

⟨Locking the swivels⟩

- When pushing the baby stroller on uneven surfaces or slopes, temporarily locking the swivels of the wheels on the forward side of the moving direction (left & right) will allow for easier pushing.
- Depress the swivel lock levers on the forward side of the moving direction to lock the wheels. (Left & right)

⟨Releasing the swivels⟩

- · Used under normal circumstances.
- Raise the swivel lock levers on the forward side of the moving direction to release the swivels. (Left & right)
- The swivels of the wheels on the user side are locked automatically and cannot be released manually.

Using the stoppers



- · Always lock both stoppers when placing the baby in or lifting the baby out of the baby stroller.
- Do not rely solely on the stopper when the baby is in the baby stroller. Due to road conditions, the wear and tear of the product and other mechanical reasons, the stopper may not absolutely prevent the baby stroller from moving by itself.
- · Even with the stopper locked, do not walk away from the baby stroller when the baby is still inside



Even if the baby is not in the stroller, please still lock the left and right wheel brake when leaving the stroller.

⟨Locking the stoppers⟩



- Depress the stopper levers to engage the stoppers. (Left & right)
- Confirm that the stoppers are locked by moving the baby stroller back and forth lightly.



 If it is difficult to lock the stopper, try to lock it again after moving the baby stroller back and forth.

⟨Releasing the stoppers⟩




Lift the stopper levers to release the stoppers.
 (Left & right)



When locking or releasing the stopper by hand, be careful not to let your finger get caught in the gap indicated by the arrow.



Opening the front guard

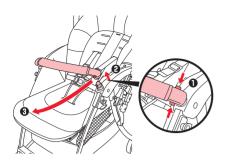


- Press and hold the inner and outer lock buttons.
- 2Pull the front guard outward to remove it.
- 3 Lower the front guard.



- \cdot When attaching the front guard, please be careful to avoid the fingers getting caught by the locks.
- Do not open the front guard and lift or pull the baby stroller with the child seated on it.

Using the footrest support

 When the backrest is reclined, the footrest will help the child to maintain a comfortable position.

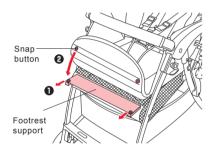

- Lift the seat and pull out footrest support from under the seat. (Left & right)
- Pasten the snap buttons on the inside of the seat to the snap buttons at the front of the footrest.

Using the basket



Stroller instructions

- Do not put sharp items into the basket for those may damage the basket.
- Do not load items over 5kg.
- Remove all items before folding the stroller.



· Please place items into the basket from the top.



 When placing materials in the storage basket, please distribute the material weight evenly in the storage basket.


Attaching the protective pads

• The protective pads in the baby stroller help to support the baby in maintaining the correct posture.

Head mamolu pad For use until the baby can hold his head up without any support.

(Approximately 4 months old as a guide)

• Please use the head mamolu pad only when the shoulder belts are installed at the lower shoulder belt holes. The head mamolu pad can be used for babies up to a maximum of 7 months old. (See "Adjusting the shoulder belt height" on page 17)

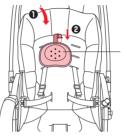

Hook-and-loop fastener (reverse side of the seat)

- Using protective pad in flat bed mode ∘ (See P18)
- Unfasten the hook-and-loop fastener strap on the head mamolu pad. Pass the strap through the pad attachment hole in the direction of the arrow and affix it to the hook-and-loop fastener at the reverse side of the seat.



 If there is difficulty in attaching the pad, remove the top portion of the seat, and attach it while looking at the reverse side of the seat. (See "Removing the seat" on page 23)

(Position to attach the head mamolu pad)




- Attach the pad such that the inflated portion at the lower end of the pad fits in nicely with the back of the baby's neck.
- ※Remove the pad if the inflated portion at the lower end of the pad does not fit in nicely with the back of the baby's neck.



• The head mamolu pad cannot be used when the shoulder belts are installed at the middle or upper shoulder belt holes.


Waist mamolu pad (for use between 1 month to about 3 years old)

 Depending on the physique of the baby, there may be cases where the waist mamolu pad may not fit in nicely with the baby anymore even before he turns 3 years old. For such cases, please remove the waist mamolu pad.

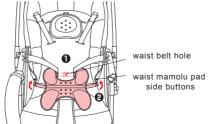

- Pass the upper portion of the belt buckle through the waist belt hole, and then fasten it.
- Pasten the snap buttons on the side of the waist mamolu pad to the snap buttons at the side of the seat. (Left & right)

Preparing for use

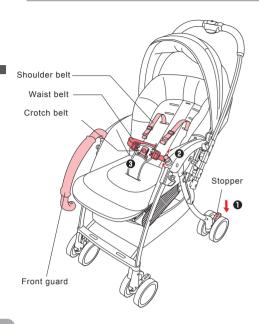


- 1 Lock the stoppers. (Left & right)
- 2 Open the front guard.
- · Press and hold the inner and outer lock buttons to open the front guard.
- 3 Unfasten the shoulder and waist belts.
 - · Press the crotch buckle to release the shoulder and waist belts.
 - · Remove the shoulder belts from the shoulder belt hooks
- · To change the position of the shoulder belt, please see "Adjusting the shoulder belt height" on page 17.
- · To change the recline angle, please see "Adjusting the recline angle" on page 18.
- · Using the footrest support. (See page 13)


2 Seating the baby

(Place the baby in the seat and fasten the seat belts>



Shoulder belt Shoulder belt hook

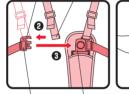

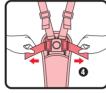

Waist belt Crotch buckle

- Place the baby in the baby stroller.
- 2 Insert the shoulder belts into the shoulder belt hooks.
- Insert the waist belt into the crotch buckle.
- 4 Pull the waist belt to the left and right to confirm that is fastened properly.
 - The length of shoulder and waist belts should be adjusted to fit the baby's size and seating position.



Caution

- · The label on the shoulder belts should be facing outward when fastened correctly.
- Check to ensure that the shoulder belts are not twisted.

After fastening the seat belts, pull the waist belt to the left and right to confirm that is fastened

The shoulder belts should always be inserted into the shoulder belt hooks during use. Otherwise, there may be a risk of the shoulder belt entangling around the baby's neck.


Do not take your attention off the baby. The baby may stand up even with the seat belts fastened. Please adjust the waist belt in line with the baby's growth.

If the waist belt is loose, there may be a risk of the baby standing and falling off the baby stroller or other dangers

The position of the crotch belt should be adjusted to suit the baby. Otherwise, there may be a risk of the baby stroller falling backward.

(Adjusting the waist belt)




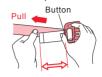

⟨To loosen⟩

Pull the waist belt while pressing the button gently to adjust

(Adjusting the shoulder belts)

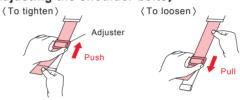


Move the adjuster to adjust the length.

· The length of the waist belt should allow for 4 adult fingers to be inserted between the belt and the baby.



· The length of the shoulder belt should allow for 1 adult finger to be inserted between the belt and the baby.

(Adjusting the crotch belt)

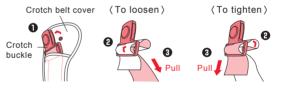

- Unfasten the snap buttons of the crotch belt cover from the snap buttons of the crotch buckle.
- Remove the crotch belt. 3 Pull the crotch belt to adjust the


 - After adjusting the belt, please check to ensure that the snap buttons of the crotch belt cover are fastened to the snap buttons of the crotch buckle



- · The length of the shoulder, waist and crotch belts should be adjusted as the baby grows older. If the shoulder, waist and crotch belts are loose, there may be a risk of the baby standing up or falling off the baby stroller even with the belts fastened.
- · Be careful not to get the baby's fingers caught when closing the front guard.
- · After fastening the front guard, confirm that it is properly engaged by pulling on it.
- · Do not raise the front guard when the baby is in the baby stroller.
- · Leave at least 3cm at the end of the waist belt (area).

· Adjust the length of the shoulder, waist and crotch belts accordingly whenever the recline angle is changed.

⟨Front guard⟩

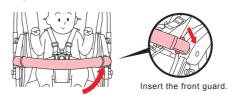

(Releasing the stoppers)



15

Stroller instructions


Adjusting the shoulder belt height



Adjust the height of the shoulder belts as the baby grows older.

(Shoulder belt position)

· When taken out from the packaging, the shoulder belts are set at the lower position.

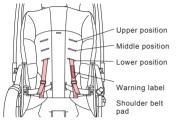

(Shoulder belt quideline)

inserted at the position below the shoulder.

· Shoulder belts should be · Adjust the position of the shoulder belts based on the three levels below.

Approximate age (body size)	Shoulder belt position
18 – 36 months	Upper position
7 – 18 months	Middle position
1 – 7 months	Lower position

The figures above serve as a guideline and they differ across individuals




· The label on the shoulder belts should be facing outward when fastened correctly.

Check to ensure that the shoulder belts are not twisted.

(Adjusting the height of the shoulder belts)

- Release the shoulder, waist and crotch belts from the thigh buckle. (See step 3 in "Preparing for use" on page 15).
- · Remove the shoulder belts from the shoulder belt hooks
- · Lift up the seat. (See step 101 on P23)

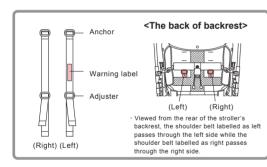





- 1 Turn the shoulder belt anchor such that it is parallel to the
- 2 Pass the shoulder belt anchor through the shoulder belt hole of the seat and backrest

(Using the upper position)

(Using the middle position)


(Using the lower position)

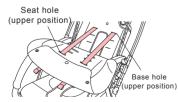

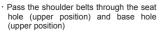



· Pass the shoulder belts through the seat hole (middle position) and base hole (middle position)

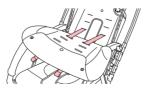

· Pass the shoulder belts through the seat hole (lower position) and base hole (lower position)

· After adjusting the belt, please check to ensure that the seat is reattached and the snap buttons are fastened. (See page 24)

· Insert the shoulder pads into the shoulder belts

Adjusting the recline angle

(Guideline for the position of recline angle)

Approximate age (body size)	Recline angle position
1 month – able to hold the head up	Fully reclined
Able to hold the head up – able to sit upright unaided	Fully reclined – halfway back (intermediate position)
Able to sit upright unaided onwards	Fully reclined – upright



· When the backrest is in fully reclined position, the headrest will rise.

Lowering the backrest

· Loosen the shoulder belts. (See P16)



Reclining ring




(Upright) (Semi-reclined)





2 Lower the backrest and adjust the recline angle while pulling on the ring.

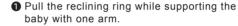

· Adjust the length of the shoulder and waist belts after adjusting the backrest. (See P16)



- When lowering the backrest with the baby in the baby stroller, please loosen the shoulder belts first.
- After adjusting the recline angle, adjust the length of the shoulder and waist belts. If the shoulder and waist belts are loose, there may be a risk of the baby standing up or falling off the baby stroller even with the belts fastened.




- Do not adjust the recline angle while pushing the baby stroller.
- When adjusting the recline angle with the baby in the baby stroller, do not change the recline angle
- Support the weight of the baby when lowering the backrest with the baby in the baby stroller.
- Please use the fully reclined position for babies who are not yet able to sit upright unaided.



· If the baby is able to sit upright unaided and the position of his head has reached the position of the headrest, lowering the backrest will result in an uncomfortable posture for the baby. As such, adjust the reclining angle to a position where the headrest will not move upward.

Raising the backrest

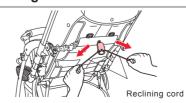

· To raise the backrest, please pull the reclining cord to the left and right while the baby's weight is not resting on the backrest.



 The backrest cannot be raised when the baby's weight is resting on the backrest





• Do not open and close the sunshade when the baby is touching it. There may be a risk of the baby's fingers or toes getting stuck in the movable parts.

(Parts of the sunshade) Window cover Snap button

Folding the fornt of sunshade



 Rotate to the front while the sunshade is open, and fix it at the desired position.

Opening the sunshade



· Open the sunshade towards the front.

Adjusting the angle of sunshade



 When the backrest is lowered, fasten the sunshade snap buttons to the back of the headrest. (Left & right)

Closing the sunshade

Stroller instructions



· Fold the sunshade

Opening the front and rear window covers



 With the window covers of the sunshade opened, you will be able to see the baby through the window.

How to fold the baby stroller




- Please do not open or close the baby stroller if the baby is touching or near the baby stroller. There may be
 a risk of the baby's fingers or toes getting caught in the movable parts, or the baby bumping into the baby
 stroller, hence posing injury risk to the baby.
- Do not allow a child to operate the baby stroller. There may be a risk of injury due to the baby stroller tumbling over or accident.



· Insert the shoulder and waist belts into the crotch buckle before folding the baby stroller. Otherwise, there may be a risk of damage to the buckle.

Request

• Due to packing, there may be occasions where the frame cannot be opened or closed smoothly at the initial stage. In such cases, please repeat the process 2-3 times to open the frame

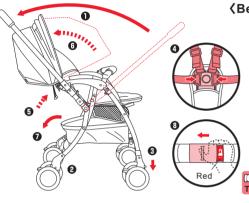

〈Before folding the baby stroller〉

- Reset the handle to the front-facing position. (See pages 9 & 10)
- 2 Push the baby stroller forward slightly to check that the swivels on the wheels which are closer to the user have been locked. (See page 10)
- (See page 12)
- (See page 15)
- 6 Raise the backrest. (See page 18)
- 6 Close the sunshade. (See page 19)
- Remove all items from the basket.
- Slide the handle lever lock to the left to unlock.
- (Red colour is indicated.)




 When using the baby stroller, please release the left and right swivel lock levers on the forward side of the moving direction.



⟨Releasing the lock⟩

Squeeze the handle lever at the centre of the handle with an upward pressure.

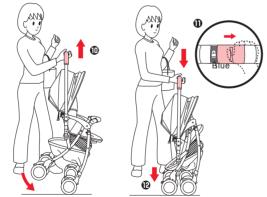


⟨Folding the baby stroller⟩

- While gripping the handle lever, lift the handle. Tilt the baby stroller forward slightly and lower the handle to fold the baby stroller.
- ① Lock the handle lever. (
 Blue colour is indicated.)
- D Lock the stoppers on the user side. (See P12)




· If it is difficult to fold it with one hand, use your other hand to hold the front guard while folding.

Removing the sunshade

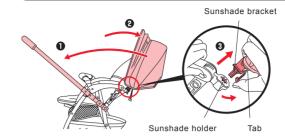


- Switch the handle to rear-facing position. (See page 10)
- Close the sunshade. (See page 19)
- **3**Use your fingertip to flick the tab at the bottom of the sunshade bracket

Removing the front guard cover

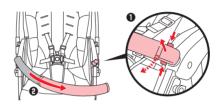


- Open the front guard.
- 2Remove the front guard cover.

Removing the basket

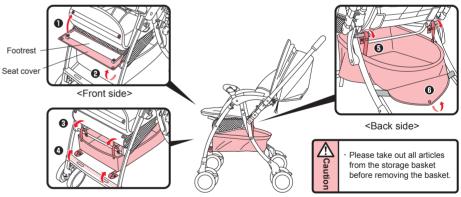


- Unfasten the locking button of the footrest (left and right)
- 2 Unfasten the snap buttons of the seat cover and roll it up.
- **3**Unfasten the snap buttons at the front of the basket. (left and right)
- · Follow the steps in reverse order when installing the basket.
- **Please refer to right image shown to instell the seat cover.
- ①Use your fingertip to instell the seat cover from the stroller front tube.
 ②Make sure the seat cover is all cover the seat cushion tube.

- Unfasten bottom of the front of the basket. (left and right)
- SUnfasten buttom of the rear side. (left and right)
- **6**Unfasten rear locking button.

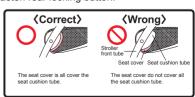


Please do not let the baby sit on the stroller with the seat fabric article removed, since this may cause unexpected damage on the stroller.

Proceed after removing the shade. (Please read P22)

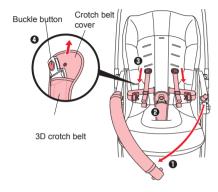


- Open button-type open handle.
- 2Push the buckle button to unfasten the shoulder and waist belts.
- 3Pull out the shoulder belts. (See page 1702)
- buckle from the snap button on the crotchbelt cover.


Upper belt snap button

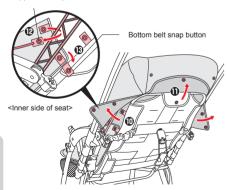


- Ounfasten the snap buttons on both sides of the seat. (4 locations)
- **1** Unfasten the snap buttons on the back of the backrest. (2 locations)
- **12**Unfasten the upper belt snap buttons and pull them out.
- **B**Unfasten the bottom belt snap buttons and pull them out.

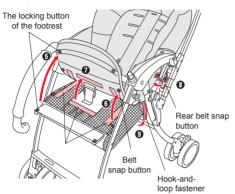

- **5**Unfasten the snap buttons on the footrest support.(2locations)(If footrest support is used)
- **6**Unfasten the belt snap buttons under the seat. (2 locations)
- Ounfasten the snap button on the inside of the crotch Unfasten the hook-and-loop fasteners under the seat.
 - 3 Unfasten the rear belt snap buttons on the sides of the seat. (2 locations)
 - **9**Unfasten the hook-and-loop fasteners on both sides under the seat. (2 locations)

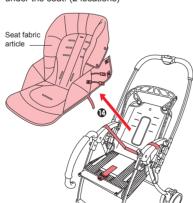


@Unfasten the snap buttons and remove the Seat fabric article.

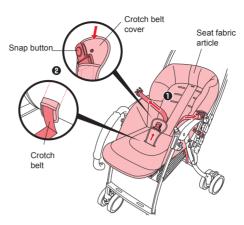


- Install the seat by inserting the crotch and waist belts through the holes on the seat.
- 2 Install the crotch belt cover onto the crotch belt. Fasten the snap button on the inside of the crotch buckle to the snap button on the crotch belt cover. Insert the front end of the crotch belt cover through the


inner side of the seat.

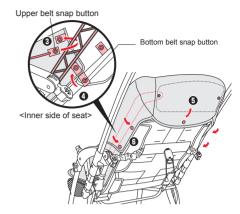

- 3 Pass the upper belt snap buttons through the main body and fasten them. (2 locations)
- 4 Pass the bottom belt snap buttons through the main body and fasten the snap buttons.
- **5** Fasten the snap buttons on the back of the backrest. (2 locations)
- **6** Pass the seat through the inside of the backrest support belts and fasten the snap buttons on both sides

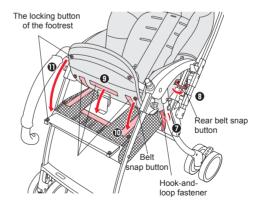

- **P**Fasten the hook-and-loop fasteners under the seat. (2 locations)
- 3 Fasten the rear belt snap buttons on the sides of the seat. (2 locations)
- **9** Fasten the hook-and-loop fasteners under the seat. (3 locations)
- Pasten the belt snap buttons under the seat. (2 locations)
- **O**Fasten the snap buttons on the footrest support. (2 locations) (If footrest support is used)

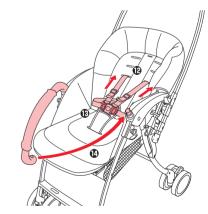

- (See page 1702)
- Binsert the shoulder and waist belts into the crotch buckle.
- Attach the front guard.
- · Installation of the basket and sunshade. (See P22)

Maintenance of sewing parts

<The cleaning method for the seat-sewn cover, handle protector, preventing</p> respiratory tract block protection head cushion, and waist and hip protection

· Please note the following laundering & cleaning symbols.















※ Do not wring or twist



- · If drying the sewing outdoor, please place it flat on a shady area to dry it.
- · Please do not use alkaline detergent, acidic detergent or bleach containing chlorine.

<Cleaning method for the shade, shoulder belt, and storage basket>

- · Please do not put the entire component into the laundry machine. Please clean it according to the instructions below.
- · Situation for water soluble smudges (such as juice, saliva, or urine): Please use a soft wet cloth, submerged in 40 degrees warm water and dried out slightly, to wipe out the smudge. Use a dry towel to wipe it out, and then put it in a shady place to dry naturally.
- · Situation for non-water-soluble smudges (such as milk, fat, or salad dressing): Please add neutral detergent into 40 degree warm water, and then use brush or sponge to clean the smudge. Use cold or warm water to wash out the neutral detergent, use a dry towel to wipe water, and then place it in shady area to dry naturally.



· If any damage or abnormal situation is discovered on sewing, please stop using it and contact our maintenance center for help.

Maintenance of the stroller frame

<Maintenance of the frame and wheel>

· Please do not ignore the mud or dirt attached to the wheel. Wipe it out and clean it up with a wet towel.



- Breakdowns will occur often when mud or dirt is attached to the frame or wheel, so please stop using the stroller in this situation.
- Please do not use volatile solvents such as diluents or essential oil to clean mud or dirt.
- · The tire is consumable, so when the tire approaches a thickness of 5 mm, please contact our maintenance center to replace it (at your cost).

<Maintenance of the screw and screw cap>


· Please check if the screw or screw cap if loose routinely. Please screw it tight when they aet loose.

<Maintenance for the button-type open handle>

· Please use a dry towel to wipe out the dust in the joint of the open handle and stroller frame.

<Add lubricating oil>

- · Please occasionally add lubricating oil used for plastic products onto the movable joint.
- · Please remove mud or dirt and wipe out any water before adding lubricating oil.
- · Please add about 2~3 drops in every component.
- · If any problem occurs while folding or unfolding the stroller. such as being unable to turn the turning fixer smoothly, or hearings noises on the wheel and main frame, please add lubricating oil used for plastic products on the places shown with \Longrightarrow arrow, and repeat the folding/unfolding action 2 to 3 times.

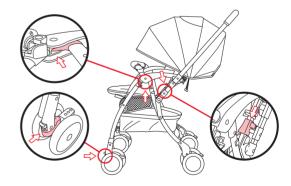

Caution

Please do not use lubricating oil in the joint and neighborhood of button-type open handle and stroller frame to avoid unlocking the button-type open handle and cause the baby fall down.



Simple routine maintenance

Troubleshooting

· If the following method still does not resolve the problem, please contact our maintenance

<Encounter problem in use>

Problem	Troubleshooting
Cannot operate handle control button	Please release the safety control lock and then do it again (see P7).
Wheel is not turning	Please unlock the wheel fixing lock on both sides (see P12).
Wheel does not turn smoothly	Please add lubricating oil to the wheel (see P26).
Rear stoppers cannot be locked	Push the baby stroller slightly forward, then lock the stoppers. Ensure that no debris or other foreign particles are lodged in the rear stoppers.
Handle cannot be switched	Make sure the switch lock moves to the bottom completely when the stroller is unfolded (See P8). Please release the left and right safety control lock on the handle before switch it (see P9).
Backrest cannot be pulled up	Please take the baby out of stroller first, and then pull the stepless lay-flat angle adjusting belt (Please read P18)
Baby stroller cannot be opened	Ensure that the seat fabric is not caught in the front guard and other main body structures.
Shoulder belt can not insert into waist belt	Please make sure the clothes and seatbelt are not caught.
Baby stroller has to be moved backward Lift the baby stroller up slightly with the handle so that the	Lift the baby stroller up slightly with the handle so that the wheels on the user side are slightly off the ground, then move the main body.
The wheels on the user side are slanted Check whether the wheels on the user side are locked. If they are locked,	Check whether the wheels on the user side are locked. If they are locked, raise the swivel lock levers to unlock them.
When the tire is worn	Replace the tire when the thickness of tire is less than 5 mm. Please contact our maintenance center.

<For used product>

Problem

 Please place the framework inside a plastic bag and store in a cool place without direct
sunlight.
· Please do not place heavy objects on top of this product during storage. Overload may
cause malfunction or deformation.



- · To avoid the distortion of the shade, please do not put stroller by its side or place heavy material on the stroller. Also, keep the stroller from high temperature areas when stored.
- · Please do not place the stroller near a source of ignition. Please do not put the stroller inside the car on a hot day, since the plastic component may deform and would not fulfill its function.

Maintenance/Disposal guide

Disposal guide

Maintenance

- · Please dispose this product according to local regulations.
- · Please do no dispose arbitrarily for environmental awareness.

N
Е
N
C

MEMO	MEMO