

〈僅限台灣地區使用〉

保固規定

- 1) 消費者請於購買時要求經銷商在本保證書上蓋章,並填上銷售日期。
- 2) 本公司產品之保固期間為自購買日起一年間。
- 3) 產品在保固期間內需要維修服務時,請出示本保證書。
- 4)產品維修前,未出示本產品保證書或保證書尚未蓋店章、未填寫銷售日期時,即使於一年內購買,亦無法享有一年保固之免費修繕服務。
- 5) 於品質保證期間內,由於零件短少、加工不良等製造商所引起之原因,由製造商提供免費修繕服務(含運費)。 若為消費者之責任,則計費維修。
- 6) 免費修繕服務不包含以下項目。
 - ◎非歸責於製造商責任之任何損壞與故障。
 - ⊚坐墊、遮陽篷等刮傷。
 - ◎使用者任意變更所引起。
 - 由自然災害或事故等原因所引起。
 - ◎框架自然劣化(塗料部分需時常保養)。
 - 〇錯誤的使用方法或保養不良所致。
 - ②車輪的自然消耗。

使用時,如發生故障或強烈撞擊、不慎掉落等情況及發現有零件需要更換時,台灣國內請向公司維修中心聯絡,海 外地區請洽當地代理商聯絡,我們竭誠為您服務。

□ Magical Air S □ Magical Air Plus S □ Magical Air Plus Bitte		型號	
		購買日期	年 月 日
顧客資料	姓名 地址	經銷商 確認章	
	電話 E-mail		(請務必蓋章或將保固貼紙貼於此處・保證方為有效)

- ○請確認購買時之經銷商店名稱,填寫型號、購買日期。
- ○本保證書不另行補發,因此請小心保管,避免遺失。
- ○本保證書填寫之個人資料,僅使用於產品保固及修理事宜。

總公司

アップリカ・チルドレンズプロダクツ合同会社

本社/大阪店 — 〒542-0082 大阪市中央区島之内1-13-13 **TEL0120-415-814**

Aprica Children's Products G.K.

1-13-13, Shimanouchi, Chuo-Ku, Osaka, Japan

進口商

台灣愛普力卡股份有限公司

總公司營業部 地址:新竹縣竹北市台元街28號5樓之3

電話:(03)5525688 傳真:(03)5525690

維修服務中心 地址:新竹縣竹北市福興路885號

電話:(03)6561261 傳真:(03)6561267

公司網址:http://www.aprica.com.tw

意見信箱:0800@aprica.com.tw 統一編號:22662003

Aprica


Magical Air S Magical Air Plus S Magical Air Plus Bitte

使用說明書/保證書

非常感謝您購買此產品。 此產品適用於出生後6個月~36個月, 體重15公斤以下的嬰幼兒。

※本説明書所敘述的出生後6個月,指的是母親懷孕 37周以上,出生時體重超過2.5公斤以上,出生 超過6個月的嬰幼兒。

使用前請詳細閱讀本說明書並正確地使用。請勿使用本説明書內容以外的方法操作本產品。不僅無法充分發揮本產品的功能也十分的危險。 使用後請妥善保存此書。

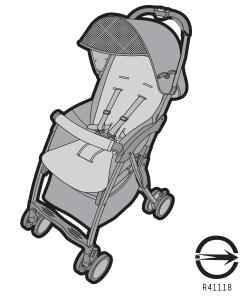

目 錄

使用前
使用前的注意事項
給保護者的建議/基準/關於本書的標示
使用上請注意2~5
警告/注意
製品取出時6
各部位名稱 (Magical Air S)7
各部位名稱 (Magical Air Plus S & Magical Air Plus Bitte)
嬰幼兒手推車的使用 方法
嬰幼兒手推車的開啟方法
車輪迴轉固定器的使用方法10
後輪敦車器的使用方法 10

讓嬰幼兒乘坐手推車的方法......1~12

安全肩帶的高度調節方法13

無段式角度調節器的使用方法......14

ლ 彻廷印 以 用 刀 Д	
置物籃的使用方法	15
嬰幼兒手推車的收折方法	16
縫製品的拆卸方法	
遮陽篷的拆卸方法	17
扶手保護套的拆卸方法	18
座椅縫製品的拆卸方法(Magical Air S)	.19
座椅縫製品的拆卸方法 (Magical Air Plus S & Magical Air Plus S & Magical Air Plus B & Magical Air Plus	2

海隍笈的庙田专注

MEMO

保證書..

日常保養	21
保管/廢棄方法	22
覺得故障嗎?送修前先確認	23
品質保證	24

..25~26

PD331003H

給保護者的建議

寶寶並非成人的縮小版。

特別是頸部尚未發育完全的寶寶更是如此。

請充分了解寶寶的情況,並小心使用嬰幼兒手推車。

- ① 請隨時注意寶寶的情況, 並避免連續使用。
- ②請避免讓寶寶直接照射到陽光。

因為嬰幼兒手推車內的溫度,比大人的感覺來得高。

- ③請避開人群多的地方,以避免噪音、粉塵。
- ④經過不平整的路面,請盡可能放慢速度,並且請避開引起振動、衝擊的路段。
- ⑤本說明書所使用的插圖、組裝等,為求簡單明瞭,並非與實品完全相同。請以實際物品為主。

基準

• 本產品台灣CNS認證,達到以下各項基準。(此製品為CNS基準B車合格品。)

適用範圍	此嬰幼兒手推車限寶寶一人乘坐,提供戶外、購物等一般家庭親子移動 上的使用。
車 種 的 形 式	B車 出生後六個月* 頸椎發育完成的嬰幼兒才可使 用的嬰幼兒手推車。
適 用 年 齢	出生後6個月至36個月以內
建議連續使用時間	坐立姿勢:1小時以內
平 躺 角 度	100°以上
車 輪 外 徑	115mm以上

※此處所稱出生後6個月,是指懷孕週數37週以上,且出生時之體重滿2.5kg以上,出生後6個月之嬰幼兒。

關於本書的標示

「警告」、「注意」等符號是預測您未遵守注意事項的情況下,依據危害、損害的嚴重性來作區分。標示所表示的內容十分重要,請您務必遵守。

1	標示	標 示 之 內 容	
	⚠警告	警告 使用方法錯誤時,可能會造成人員死亡或重傷等情形。	
	★ 注意 使用方法錯誤時,可能會造成人員受傷、使物品損壞等情形。		

禁止		標	示	之	意	義
0	請勿操作本說明書所禁止的行為。					



使用產品時的便利小建議。

使用上請注意

· 為避免意外事故發生,使用前請務必詳閱使用説明書,並且正確地使用。

⚠ 警告

·使用方法錯誤時,可能會造成人員死亡或重傷等情形。

因恐寶寶有不慎掉落的危險。

請務必將安全肩帶、安全腰帶 、立體式股帶繫好再使用。



請勿讓寶寶站立於嬰幼兒手推車上。



腰部安全帶若有鬆脫,因恐寶寶站起來並且不慎造成跌倒或掉落等危險發生。

請勿讓實實離開您的視線。即 使繫上安全帶,實實仍然可能 會站起來。請依實實成長狀態 調節腰部安全帶。



因恐嬰幼兒手推車的車輪掉落於路面上的溝內, 而使得嬰幼兒手推車失去平衡並且不慎造成寶寶 及使用者受傷等危險發生。

當遇到有格子狀排水溝蓋的道路且必要通過的情況下,請先確認嬰幼兒手推車的車輪寬慢 是否適合。如果適合,請慢慢且仔細地推行嬰幼兒手推車。



前輪卡住時,請一手握著手把 以及一手握著前腳管,提高前 車輪。請勿將整台嬰幼兒手推 車舉高。



在坡道等地方,嬰幼兒手推車恐因自行滑動、翻覆,而導致實實有受傷之慮。

當實實乘坐時或離座時,請務 必將車輪煞車器左右兩邊同時 鎖上,並確認嬰幼兒手推車不 會滑動。



當實寶乘坐或置放物品時,請 勿過度相信煞車器。因路面狀態、構造功能及耐久性等之不 同,因此煞車器末必能絕對煞 住嬰幼兒手推車。



即使鎖上煞車器,也請勿讓實 實離開您的視線範圍,獨留於 手推車內。



因恐失去平衡、看不到路面情況,而有導致摔倒 之虞。

當寶寶乘坐時,請勿直接將嬰 幼兒手推車提起懸空。



〈接下一頁〉

· 使用方法錯誤時,可能會造成人員死亡或重傷等情形。

因恐嬰幼兒手推車傾倒,導致寶寶掉落而受傷的 危險。

因恐導致嬰幼兒手推車收折時,而使寶寶有摔落、 夾傷之虞。

使用嬰幼兒手推車前,請 確認左右開關鎖扣是否完 全扣住。



請勿在樓梯、手扶梯等有高低落差的地方使用。

請勿讓兩名寶寶同時乘坐或搭

乘於座墊以外的地方。







因恐嬰幼兒手推車翻覆,而使寶寶摔落受傷之虞。

當實寶乘坐時,請勿在置物籃 以外的地方放置物品,勿在手 把懸吊物品。此外,請勿倚靠 在手把上。



因恐嬰幼兒手推車會受到路面影響使得車內的溫度 變高,導致寶寶身體受到傷害的危險。



高溫或日照強烈時,請勿長時 間使用。



安全肩帶及安全腰帶請務必一 起使用,並調整到適合寶寶體 型的位置。



因恐導致嬰幼兒手推車破損、事故、受傷、意外事 故之虞。

當使用嬰幼兒手推車 時,請勿過度施力。



▲ 警告

·使用方法錯誤時,可能會造成人員死亡或重傷等情形。

使用各可動關節部位時,有夾傷寶寶手腳、 車體撞及寶寶或使用者本人的危險。

當您折疊收納嬰幼兒手推車時,請勿讓寶寶靠近。



因恐嬰幼兒手推車傾倒導致寶寶掉落而受傷的危險

裝置開放型扶手時,請 務必注意寶寶的手腳。



因恐導致嬰幼兒手推車破損,使得寶寶或使用者受傷之虞。

- ◎請勿讓兒童操作本嬰幼兒手推車。
- ◎當寶寶乘坐時,請務必讓寶寶的股間對準立體式股帶的 位置。否則因恐使得嬰幼兒手推車往後翻覆之虞。
- ◎本公司維修人員外,請勿自行分解、安裝或改造。
- ◎請勿在座椅縫製品拆下的狀態下使用本產品。
- ◎請勿在猛力撞擊或掉落後使用。
- ◎請勿當成兒童玩具使用。
- ◎請勿將本車用於寶寶乘坐之外的任何用途上。

○越過段差的場合,若寶寶在乘坐的狀態下,請注意可能被推倒的意外發生。

請將手把向下輕壓,同時抬起安全扶手,讓手推車越過段差處。



⚠注意

·使用方法錯誤時,可能會造成人員受傷、使物品損壞等情形。

- ◎請務必定期檢查與保養。
- ◎使用前,請先確認嬰幼兒手推車主體與座席已正確 安裝完成。
- ◎請適時替可動關節部位上油,並務必使用塑膠製品 用的潤滑油。
- ◎長時間未使用的嬰幼兒手推車時,請務必進行檢查 或保養後再使用。
- ◎即使是空車,也請勿將嬰幼兒手推車放置於斜坡上 或鄰近車道的人行道等危險場所。
- ◎請勿在螺絲或螺帽鬆動的狀態下使用。
- ◎請勿將兩輛手推車併在一起使用。
- ◎請勿將前輪呈高舉狀態行走。因恐浩成後部框架彎 曲變形或斷裂。
- ◎常寶寶乘坐於嬰幼兒手推車並日在行進中時,為了 ◎風勢強勁時,請勿使用。 寶寶的安全,請以一般的步行速度行進

(時速約4公里左右的速度)。

- ◎請勿將嬰幼兒手推車推至沙地或泥濘處。
- (關節轉折處易因沙粒進入導致開關收納困難。)
- ◎框架處沾染沙粒或泥土時請勿置之不理。

(關節滑動處易因沙粒進入導致開關收納困難。)

- ◎嬰幼兒手推車是為了讓寶寶乘坐。為了避免造成損 壞,請勿加裝任何市售零件。
- ◎請勿在置物籃放入重量5kg以上的物品。
- ◎家長、照護者請勿倚靠在嬰幼兒手推車上。
- ◎請勿用來搬運物品等。
- ◎本產品僅限於嬰幼兒乘坐。

◎請勿在公車上使用。

本產品之設計,並非以公車上使用為目的。若在公 車上使用本產品,因恐轉彎、緊急煞車等原因,而 有發生翻覆或意外事故之虞。

◎電車上使用的注意事項。

本產品之設計,並非以電車上使用為目的。於電車 中使用本產品,恐因轉彎或緊急煞車等情況而有翻 覆之虞,因此請務必使用煞車器,並盡充分之注意 ,若發生意外,責任由使用者自行承擔。

- ◎在電車等場所使用時,請勿強行上下車,嬰幼兒手 推車可能未被感應到,造成嬰兒車被電車的自動門 夾住,因恐浩成寶寶受傷之盧。
- ◎請勿在積雪處或是結霜的路面上使用。
- ◎打雷時,請勿使用。
- ○由於易導致嬰幼兒手推車車內溫度變高,故請勿在 室內、靠近火源處或高溫場所等地方使用遮雨罩。
- ◎由於易造成塑膠部分變形而無法維持其原有功能, 故請勿放置靠近火源處或炎夏高溫車內。
- ◎請勿做出其他可能導致嬰幼兒手推車故障之行為。

製品取出時

- 製品取出時,請務必進行各部位檢查工作。
- 部品有缺少、弄錯或者破損時,請與經銷商或者總公司連絡。(請參閱封底「產品保證書」)




• 從箱子裡取出時,本產品處於折疊 狀態。嬰幼兒手推車的打開方式, 請參閱P9。

○製品取出時。

A 部位的車輪迴轉固定器於鎖定的狀態。

B部位的車輪煞車器處於鎖定的狀態。

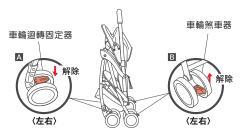




○使用前,請先解除鎖定狀態。(請參閱P10)

附屬品

使用說明書


〈製品特徴〉

- 框架為輕量鋁管。
- 前後收摺方式。
- 後方的手把為固定式。

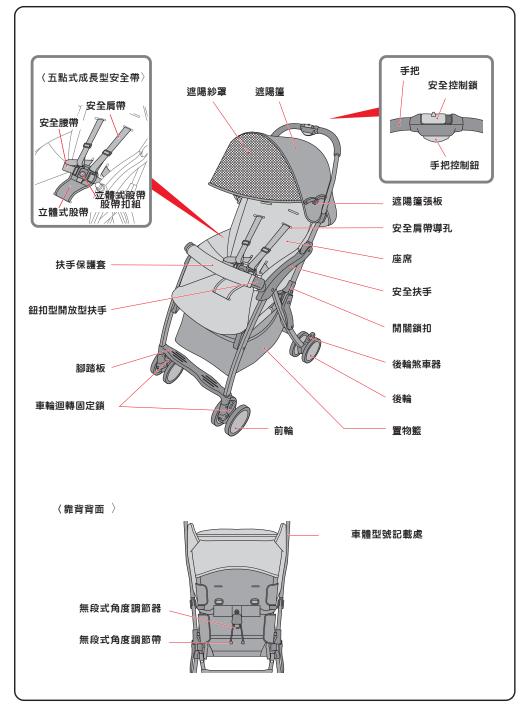


- 當實實碰觸手推車或靠近手推車時,請勿收折或打開車體。因恐可動關節部位夾到實實手指、手腳 或是嬰幼兒手推車碰撞寶寶身體,而使寶寶有受傷之虞。
- 請勿讓兒童操作嬰幼兒手推車。因恐導致跌倒或意外事故發生等危險。

小叮嚀 • 因捆包裝箱的關係,初次使用可能無法順利開啟的情況發生。請重複操作2~3次後再進行開啟。

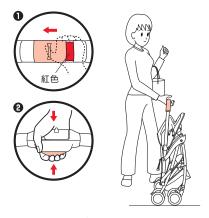

〈解除安全控制鎖〉

- 將控制開關往左橫推,解除安全控制鎖。 (顯示出紅色部分)
- 2 施力於手把中央部位,將手把控制鈕向上壓。

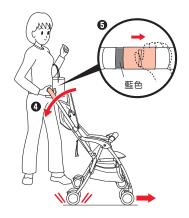

- ❹持續握著,朝後輪方向將手把向下壓到完全展開。
- **⑤**鎖上安全控制鎖。(顯示出藍色部分)



• 使用之前,請先確認開關鎖扣已完全降到 底。否則恐導致嬰幼兒手推車收折,而使 寶寶有摔落、夾傷之虞。





開車體。

〈打開嬰幼兒手推車〉

3 手握手把將後輪提高離開地面。



• 若有難以使用單手開啟的情況, 請用另一隻手握住開放型扶手展

車輪迴轉固定器的使用方法

〈使用迴轉固定器時〉


• 在平坦的道路上行走時,左右兩邊固定器一 起解除。(車輪可以順暢的變化方向)



● 壓下迴轉固定器 (左右),解除固定。

〈不使用迴轉固定器時〉

• 行走於凹凸路面、坡道或是傾斜處時,請將 左右兩側迴轉固定器固定住。

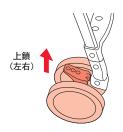

● 拉起迴轉固定器(左右),鎖上固定器。

由於採用可以吸收路面衝擊的新構造,故當您感受到迴轉固定器有強烈彈性情況時並非異常狀態,請不用擔心。 **建議** • 一般情況以及在平坦路面使用時,請改變前輪迴轉固定器方向,使車輪可以順暢的變化方向。

ؤ輪煞車器的使用方法

- 讓寶寶乘坐時,請勿過於倚賴後輪煞車器。即使使用後輪煞車器,依據路面狀態、構造的機能上及耐 久性,無法保證絕對不會移動。
- 若是使用了後輪煞車器,也請不要讓寶寶離開您的視線範圍

• 寶寶未乘坐時或者離開嬰幼兒手推車時,請務必鎖上後輪的左右煞車

〈解除〉



● 拉起後輪煞車器(左右),解除固定。

若使用者用手來解除後輪煞 車器,請注意 → 符號標註 的部分,因恐夾到手指而有 受傷之虞。



〈上鎖〉



- 壓下後輪煞車器(左右),鎖上固定器。
- 請前後推行嬰幼兒手推車,確認後輪煞車 器確實鎖上。




• 若後輪煞車器不容易鎖上時,請前後推行嬰 幼兒手推車之後,再次壓下後輪煞車器,並 且確認是否確實鎖上。

9

嬰幼兒手推車的使用方法

1 準備

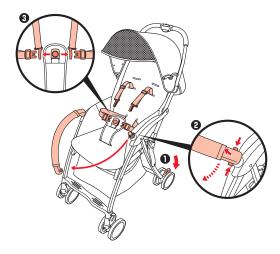

- ●鎖上煞車器。(左右)
- 2 打開鈕扣型開放型扶手。
- 按住開放型扶手鎖定鈕的內外兩端,打 開開放型扶手。
- 3解開安全肩帶、安全腰帶。
 - •按下立體式股帶的「PRESS」部位, 開開安全腰帶、安全肩帶。
- 需要改變安全肩帶的位置時,請參閱P13 「安全肩帶的高度調節方法」。
- 需要改變座席的角度時,請參閱P14「無段式角度調節器的使用方法」。


2 乘坐方法

〈寶寶乘坐之後,繫上安全肩帶及安全腰帶〉



①先讓實實乘坐於手推車上。

險發生。

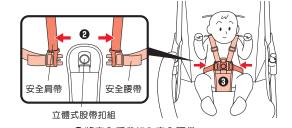

- 2 將安全肩帶扣入安全腰帶。
- ③將安全腰帶扣入立體式股帶扣組。
- ♠ 掛安全腰帶往左右兩側拉,並且確認已經拉緊。
- ※請依寶寶的成長情況來調整安全肩帶、 安全腰帶至適合的長度。(參閱P12)

⚠警告

 寶寶乘坐時,應該讓寶寶的股間部位對 準立體式股帶的位置。因恐嬰幼兒手推 車往後方翻覆等危險發生。

• 使用時,請務必將安全肩帶扣入安全腰

帶。因恐安全層帶纏繞在寶寶頸部等危

安裝安全肩帶、安全腰帶、立體式股帶時,請避免來到其他東西。若安裝不完全的話,安全帶將可能鬆脫。

安裝安全肩帶時,警示標籤應朝向外側。請確認安全肩帶沒有扭結的情況。

3 安全帶的調節方法

〈安全腰帶的調節〉




●將安全腰帶調節至適合的長度。



建設

調節安全腰帶的長度,以安全腰帶與寶寶之間可容納成人4隻手指頭的寬鬆度為適當。

〈安全肩帶的調節〉

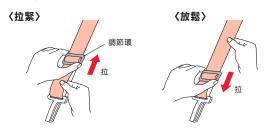

●將安全肩帶調節至適合的長度。



建議

調節安全肩帶的長度,以安全肩帶與實實之間可容納成人1隻手指頭的寬鬆度為適當。

- 請依寶寶的成長情況來調整安全肩帶、安全腰帶。
- 安全肩帶、安全腰帶過鬆時,即使繫上安全帶,寶寶仍然可能站起來,因而使得寶寶有摔落之虞。
- 關上鈕扣型開放型扶手時,請注意避免夾到寶寶的手指。
- 装上鈕扣型開放型扶手後,請拉拉看,以確認鈕扣型開放型扶手已確實鎖上。
- 當實實乘坐在手推車上時,務以關閉鈕扣型開放型扶手
- •安全腰帶的尾端(插圖中 ◆⇒> 的部分), 務必保留3cm以上。
- 調整座席靠背的角度時,應一併調整安全肩帶、安全腰帶的長度。

4 最後步驟

〈關閉鈕扣型開放型扶手〉





- •請注意寶寶的手指。
- 扣上鈕扣型開放型扶 手後,請務必確認是 否有確實扣上。

〈解除後輪煞車器〉



 
11

嬰幼兒手推車的使用方法

• 請依寶寶的成長情況,調整安全肩帶的高度。

〈安全肩帶的位置〉

• 製品從包裝箱取出時, 安全肩帶位置設定於下 段。



〈目測安裝位置〉

• 請穿過寶寶肩部下方的 肩帶導孔。




• 安全肩帶的位置,請依以下2段調整。

月齡(體格)的標準	安全肩帶導孔的位置
18個月~36個月	上段
6個月~18個月	下段

〈安全肩帶的高度調整方法〉

- 將安全肩帶、安全腰帶,從安全股帶扣組上解開。
- 解開靠背側邊的固定扣, 掀開座席。

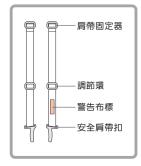






- ●將肩帶固定器轉換與肩帶平 行的方向。
- 2 將肩帶固定器穿過座席導孔 以及背板導孔。(左右)

〈使用下段導孔時〉




〈使用上段導孔時〉

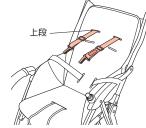

3 將安全肩帶穿過滴合的導孔 位置。(左右)

靠背平躺時



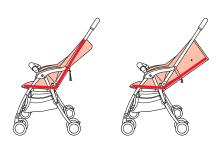

- 放鬆安全肩帶。(請參閱P12)
- ❷ 將無段式角度調整器往下拉,同時將座椅 靠背往後躺。
- ❸一邊拉著拉環,一邊將靠背往後倒,調整 至適當的角度。
- 4週整安全肩带、安全腰带的長度。



- 在寶寶乘坐的狀態下,若要將靠背倒下時,請先鬆開安全肩帶。
- 座椅靠背角度調整完成後,接著調整安全肩帶、安全腰帶的長度。安全肩帶、安全腰帶過鬆的話,即 使繫上安全帶,寶寶仍然可能站起來,因而使得寶寶有摔落之虞。



- 請勿一邊推著嬰幼兒手推車,一邊調整座席角度。
- 在寶寶乘坐的狀態下,若要調整座席角度時,請勿急速且大幅度地改變角度。
- 在實寶乘坐的狀態下,若要將靠背倒下時,請確實扶住寶寶。
- 無法獨立坐立的實實,請將座椅調到最傾斜的角度。

靠背立起時



- ●請在寶寶不完全倚靠靠背支撐的狀態下, 將無段式角度調整帶往左右拉。
- 當寶寶完全倚靠靠背支撐的狀態下,請勿豎 起靠背。



14

13

幼兒手推車的使用方法


嬰幼兒手推車的使用方法

遮陽篷的使用方法




• 請在寶寶未接觸遮陽篷的狀態下,開啟或收起遮陽篷。 否則可動關節部位可能會來到寶寶的手指或手。

打開方法

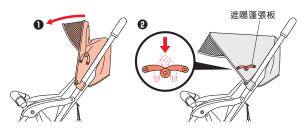

- 1 將遮陽篷往前展開。
- 2 押下遮陽篷張板。(左右)


收起方法

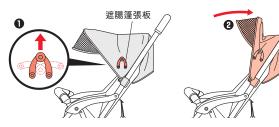

- 將遮陽篷張板往上折。(左右)
- 2 收起滤陽篷。

遮陽紗罩的收納方法

 (Magical Air S)



● 遮陽紗罩往遮陽篷方向折,即可收納。

(Magical Air Plus S)



- 遮陽紗罩往上折,並將固定帶穿過扣環內。
- 2 扣上固定扣。

物籃的使用方法



• 請由置物籃的上方收納物品。



• 放置物品時,請儘量使物品的重量平均分散於置物籃底。



- 請勿將形狀銳利的物品置於置物籃內。否則可能會破壞置物籃。
- 請勿放置重量5kg以上的物品。
 - 收折嬰幼兒手推車之前,請先將物品取出。

嬰幼兒手推車的收折方法




- 當實寶碰觸手推車靠近手推車時,請勿收折或打開車體。恐因可動關節部位夾到實實手指、手腳,或 因嬰幼兒手推車碰撞寶寶身體,而使寶寶有受傷之虞。
- 請勿讓孩童操作嬰幼兒手推車。因恐造成翻覆、意外事物,而有受傷之虞。




• 請先將安全肩帶、安全腰帶插入立體式股帶扣後,再收折嬰幼兒手推車。否則恐有使立體式股帶扣破 損之虞。

//、□TI室 • 因梱包裝箱的關係,剛開始使用可能有不易收開的情況。請重複操作2~3次。

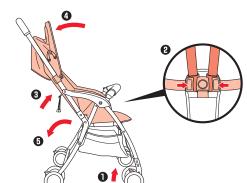


〈收折之前〉

- ●將車輪的迴轉固定器鎖上。(請參閱P10)
- ❷將安全肩帶、安全腰帶,扣入立體式股 帶扣組。(請參閱P11)
- ③豎直靠背。(請參閱P14)
- 母收起遮陽篷。(請參閱P15)
- **⑤**置物籃的物品取出。

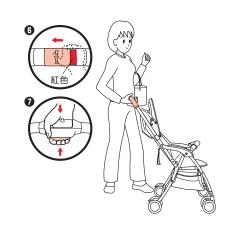



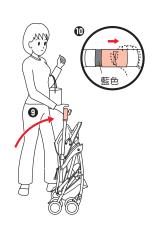

〈解除安全控制鎖〉


- ⑥往左橫推,解除安全控制鎖。
- **⑦**施力於手把中央部位,將手把控 制鈕向上壓。

〈收折方法〉

- ❸ 繼續握著手把,將車體往後倒,車體即會自動收折。
- 9 將車體立起。
- 鎖上安全控制鎖。




• 若無法以單手操作時,請用另一隻手提起開放型扶手折疊。

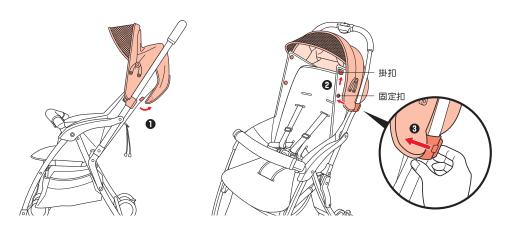


- 取起遮陽篷,並且解除後方的魔鬼貼。
- ❷解開車體兩側的固定扣,掛扣向上輕拉即可。(左右)
- 3 將圖示的卡榫往自身的方向扳動,即可取下遮陽篷。

安裝方法

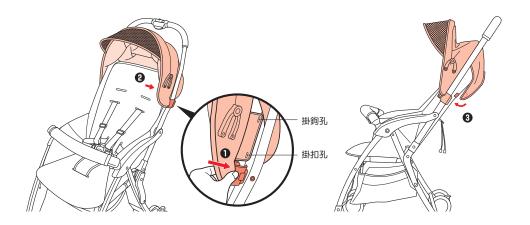

- ●將遮陽篷卡榫嵌合車體的安裝部位後,壓下固定並且注意不可卡入布料。(左右)
- ②座席側邊的掛鉤穿過遮陽篷的掛鉤孔,扣於手把側邊。(左右) 座席側邊的掛扣穿過遮陽篷的掛扣孔,扣於手把側邊。(左右)
- ③將遮陽篷後方魔鬼貼黏住車體。

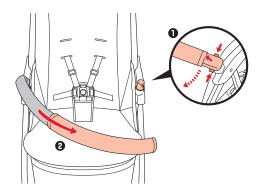


- ●打開鈕扣型開放型扶手。
 - 按住開放型扶手鎖定鈕的內外兩端, 開啟開放型扶手。
- 2取出扶手保護套。

〈安裝方法請逆向操作上述步驟即可〉


• 若縫製品需要清洗時,請先取下後再洗滌。

 縫製品為消耗品。若碰到破損、擦傷或髒汙等情況時,請與售後服務中心聯繫更換。 (須支付費用)

·請先將置物籃、遮陽篷拆卸後再進行。(請參閱P17)

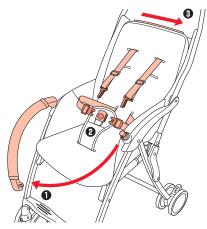


- ●打開按鈕式開放型扶手。
- ❷按下扣座解開鈕,卸下安全肩帶及腰帶。
- **③**打開拉鍊。

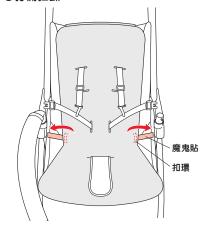

⑤座席裡側(後側)的魔鬼貼自扣環取下。 (左右)



4解開座墊下方兩側的織帶固定扣。(左右)

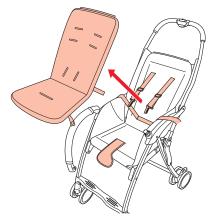

⑥將安全肩帶、立體式股帶以及安全腰帶 自車體內側取出。

〈安裝方法請逆向操作上述步驟即可〉

座椅縫製品的拆卸方法 (Magical Air Plus S & Magical Air Plus Bitte)

企警告


請勿讓寶寶乘坐於取下座椅縫製品的手推車上。

注


• 若縫製品需要清洗時,請先取下後再洗滌。

· 縫製品為消耗品。若碰到破損、擦傷或髒汙等情況時,請與售後服務中心聯繫更換。 (須支付費用)

·請先將置物籃、遮陽篷拆卸後再進行。(請參閱P17)

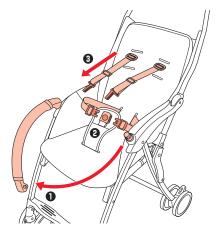

- ●打開按鈕式開放型扶手。
- ❷按下扣座解開鈕,卸下安全肩帶及腰帶。
- ❸取出安全盾帶。

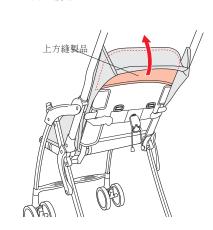


②將上方縫製品自車體的上方取出。



4解開座墊下方兩側的織帶固定扣。(左右)

⑤當拆卸遮陽篷時,已解開固定扣與掛扣。 (左右)

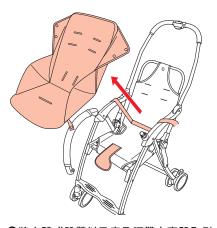

③將立體式股帶以及安全腰帶自車體內側 取出。

〈安裝方法請逆向操作上述步驟即可〉

縫製品的拆卸

方法

縫製品的清洗方法

〈座椅縫製品、扶手保護套的清洗方法〉

清洗時,請注意以下事項。















※禁止扭曲或變形。



 若要將縫製品晾曬於室外時,請於陰涼處平放 晾乾。

〈遮陽篷、安全肩帶、置物籃的清洗方法〉

- 請勿整件放進洗衣機裡清洗,請按照下述 要領清洗。
- ●水溶性污垢(如果汁、唾液、尿液等)的情況 :用40度左右的熱水將毛巾浸濕,輕輕擰乾 後充分擦拭污垢處。再以乾毛巾充分擦拭水 份後再置於陰涼處自然晾乾。
- ●非水溶性污垢(如牛奶、油脂、沙拉醬等) 的情況:首先將中性洗潔劑溶解在40度左右 的熱水中,再使用刷子或海綿輕輕刷洗污垢 点。再用冷水或溫水洗掉中件洗潔劑,用乾 毛巾充分擦拭水份後置於陰涼處自然晾乾。



• 若發現縫製品產生破損或異常現象,請立即停 止使用,並請務必要聯繫維修中心進行檢查及 維修。

車體的保養

〈框架及車輪的保養方法〉

• 請勿對黏附在車輪上的泥土、灰塵等置之 不理。務必使用濕毛巾等物品擦拭乾淨。



- 車架及車輪黏附泥土及灰塵時容易發生故障 故發現此情況時請停止使用。
- 擦拭泥土及灰塵時請勿使用稀釋液或揮發油等 有揮發性的溶劑。
- 車輪屬於消耗品。當車輪的厚度磨損掉了 5mm左右時,請向本公司維修中心聯繫 更換。(須支付費用)

〈螺絲、螺帽類的保養〉

• 請經常檢查螺絲、螺帽是否有鬆動,當發 現鬆動時請盡速鎖緊。

〈按鈕式開放型扶手的保養〉


• 常發現按鈕式開放型扶手與車台連接處有 灰塵時,請使用乾毛巾擦拭。

〈添加潤滑油〉

- 請適時地在可動關節部位注入潤滑油。並 請使用塑膠用的潤滑油。
- 在注油之前,請先去除泥土及灰塵,並將 水分擦拭乾淨。
- 注油時,請在每個部位注入2~3滴左右。

• 按鈕式開放型扶手 與重台連接處的附 近及內部請勿使用 潤滑油。避免解開 按鈕式開放型扶手 時寶寶有掉落的危 。 劔



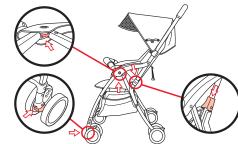

●若無法順利折疊展開車體,日無法順利回轉 迴轉固定器以及車輪與車體產生聲響,請在 上圖 ➡️箭頭處添加市售潤滑油,再重複開 閉動作2~3次即可。

保管方法

- ○請將主體放入塑膠袋內,保管在沒有陽光直射的陰涼場所。
- ○請勿在上面放置重物、施加壓力的狀態下保管。恐造成故障或變形。



- ○為避免遮陽篷變形,請勿橫倒手推車或放置重物在車上。且避免放置在高溫的場所裡做保管。
- ○請勿置於火源附近、勿在大熱天下放置於高溫車內。恐易使塑膠零件變形、無法維持性能。

廢棄方法

- ○請依照各區域的廢棄物處理方式做處理。
- ○為維護地球環境,請勿隨意放置丟棄。

覺得故障嗎?送修前先確認

〇倘若採取以下的方法卻仍無法解決問題時,請與本公司維修中心連絡。(請參閱P24)

〈使用中發現問題時〉

問題	處理方法
車輪無法迴轉時	請將左右兩邊的車輪迴轉固定鎖一併解除。 (請參閱P10)
車輪的轉動不靈活時	請在車輪注入潤滑油。(請參閱P21)
後輪煞車器失靈時	請確認後輸煞車器部位是否夾到碎石等異物。
靠背無法豎直時	請先將寶寶抱離嬰幼兒手推車,然後拉動無段式角度調節帶。 (請參閱P14)
安全肩帶無法插入安全腰帶時	請確認是否夾到衣物或安全帶。
無法收折嬰幼兒手推車時	請先完成〈收折之前〉的動作,然後再進行收折步驟。(請參閱P16) 請確認開關鎖扣部分是否夾到安全帶。
輪胎磨損時	輪胎的厚度低於5mm時,即需更換。 請與本公司維修中心連絡。(請參閱P24)

〈使用二手品〉

問題	處理方法
不了解之前的使用者是如何使用	對於使用狀態不明的商品,不建議使用。
嬰幼兒手推車出現裂痕或重大損傷時	切勿使用。


保固與售後服務

〈保固事宜〉

○於品質保證期間內(自購買日起1年內),由於零件短少、加工不良等可歸責於本公司者、依 照使用說明書及注意事項而在正常使用狀態下故障者,根據保固規定提供免費修繕服務。 自購買日起已超過3年之產品,雖仍受理修理,但產品修理部位以外之品質,則恕不保證。 此外,已停產之產品,可能因修理所需零件已無庫存而無法修理。(零件之保有期間為停產後 3年期間。即使於3年內,零件之顏色、布料之花樣等方面,亦有可能無法符合您所指定的,敬 請見諒。)

〈售後服務事宜〉

- 使用中發生故障等情況,或檢查中發現時,需要更換零件或修理時,各部位之固定部位發生鬆 動或異音、零件缺損或車輪轉動有異常時,以及感覺到其他異常時,請停止使用,並確認產品 名稱、型號、批號(參考下圖)後,向本公司維修中心聯絡。
- ○聯絡時,請務必告知本產品腳管之品名、型號、批號,以利進行後續處理作業。

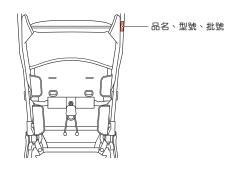

維修服務中心聯絡方式

台灣愛普力卡股份有限公司 維修服務中心

連絡電話: (03) 6561261

服務地址:新竹縣竹北市福興路885號

MEMO	MEMO



Magical Air S Magical Air Plus S Magical Air Plus Bitte

User Manual

*For ASEAN countries ONLY

Thank you very much for choosing to purchase an Aprica Product.

This baby stroller is suitable for use with a single baby of 6 months to 36 months old (approximately 15kg in weight).

*6 months old refers to babies who are 6 months after birth following 37 weeks of pregnancy and weigh above 2.5kg at birth.

Please read this user manual thoroughly to ensure correct usage.

Please store this manual in a convenient location after reading for future reference.

Please do not use this product in ways other than specified in this user manual.

The product may not perform as indicated, and will result in serious danger.



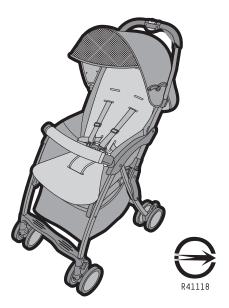


Table of Contents

Introduction

How to Use the Baby Stroller

Opening the Baby Stroller
Using the Castors
Using the Stopper
Placing Your Baby in the Baby Stroller11~
Adjusting the Shoulder Belt Height
Adjusting the Recline Angle

Ising the Sunshade	15
Ising the Basket	15
low to Fold the Baby Stroller	16

How to Remove the Fabric Parts

Removing the Sunshade	17
Removing the Front Guard Cover	18
Removing the Seat (Magical Air S)	19
Removing the Seat (Magical Air Plus S)	20

Others

Maintenance	21
Troubleshooting	22
Storage	22
Disnosal	22

Before Use

Advice for Parents and Guardians

A baby is not simply a smaller sized adult.

Especially for newborns who are not yet able to raise their head, extra care should be given.

Please use the baby stroller carefully after having a good understanding of the baby.

- 1. Always pay attention to the appearance of the baby and avoid continuous usage for long periods of time.
- 2. Pay attention to avoid exposing the baby to direct sunlight. The temperature in the baby stroller is higher than that felt by adults.
- 3. Avoid loud or dusty crowded areas.
- 4. Please slow down when going through rugged pavement, and avoid the surface that could ause vibration and impulsion.
- For a concise approach, the images or assembly used in this User Manual may not be identical to the real product, so please check with the real product for reference.

About CNS

O Baby strollers that show the CNS mark fulfill the following standards as prescribed by the Consumer Product Safety Association. (This product is a certified type B product under CNS Safety Standards.)

Range	This baby stroller is suitable for single baby use, and for use by a typical family in outing and shopping etc.
Types	Type B Baby stroller for babies who can sit upright and of age 6 months and above.
Age range	6 months to 36 months old
Desirable duration In a seated position: within one hour of continuous usage	In a seated position: within one hour
Backrest angle	Above 100°
Wheel diameter	115mm

^{*6} months old refers to babies who are 6 months after birth following 37 weeks of pregnancy and weigh above 2.5kg at birth.

Markings Used in This Manual

"Warning", "Caution" marks are important items that, when ignored, can cause serious damage or injury. Always follow these instructions.

Mark	Meaning
⚠ Warning	Item denoting where misuse may cause fatal or serious injury.
⚠ Caution	Item denoting where misuse may cause injury or damage the product.

Forbidden n	mark	Meaning
		The use of the product in such manner is forbidden.



Cautions Regarding Usage

O Please read this user manual thoroughly to ensure proper use, and to prevent the possibility of unforeseeable circumstances



Item denoting where misuse may cause fatal or serious injury.

Your baby may fall off the baby stroller

Do not use with seat belts (shoulder belt, waist belt, thigh belt) removed.



Do not allow your baby to stand in the baby stroller.



There may be a risk of your baby standing and falling off the baby stroller or other unforeseeable circumstances.

Even with seat belts fastened, do not take your attention off your baby.



There may be a risk of the user losing balance or the baby stroller tumbling over if the front wheels of the baby stroller are caught in drain covers in the road.

For drain covers with grating and raised elevation, and roads with large drains, push the baby stroller slowly while paying attention to the surface.



If the wheel gets caught, grasp the front frame (pipe) and handle and raise the wheel up. Do not lift up the entire baby stroller.



On a slope or sloping surface, there may be a risk of the baby stroller moving or tumbling by itself.

When placing your baby in or taking you baby out of the baby stroller, be sure to always lock the wheels so that the baby stroller will not move by itself.



Do not rely solely on the stopper when your baby is in the baby stroller. Due to road conditions, the wear and tear of the product and other mechanical reasons, the stopper may not absolutely prevent the baby stroller from moving by itself.



Do not walk away from the baby stroller with your baby still inside.



You may lose your balance or fall due to inability to see in front of you.

Do not lift the baby stroller with your baby in it.



<Continued on next page>

↑ Warning

Item denoting where misuse may cause fatal or serious injury.

There may be a risk of the baby stroller tumbling

Do not allow more than 1 child to ride in the baby stroller, or to sit on baby stroller in other ways other than in the seat.



Do not use the baby stroller with stairs, escalators, or where there is raised elevation.





Use only when the handle lever lock is engaged.

There may be a risk of the baby stroller falling backwards.

Do not place things on places other than in the basket, or hang things from the handles with your baby in the baby stroller. Also do not lean on the handles of the baby stroller.



There may be a risk of the temperature inside the baby stroller increasing due to the road conditions.

There may be a risk of the baby stroller folding up

sandwiched by the baby stroller.

During use, check to make

completely depressed.

causing the baby in the baby stroller to fall off or be

Do not use for prolonged period under the hot sun or when temperature is high.



There may be a risk of the baby being suffocated by the belt.

The shoulder belt should never be left free - it should always be connected to the waist belt. Adjust the belt according to the size of your baby.



There may be a risk of damage to the baby stroller; or the user or the baby stroller falling

Do not exert excessive weight on the handle.



↑ Warning

Item denoting where misuse may cause fatal or serious injury.

There may be a risk of your baby's fingers or toes being caught in the movable parts, or bumping into the baby stroller.

Do not open/close the baby stroller when your baby is touching the baby stroller or is close by.



Ensure that your baby's fingers and toes will not be caught hen closing the front guard.



Introduction

There may be a risk of damage to the baby stroller or injuries; or leading to unforeseeable accidents.

- Do not allow a child to operate the baby stroller.
- Ensure your baby is seated with the thigh belt adjusted according. There may be a risk of the baby stroller falling
- Do not allow anyone to dismantle, assemble or modify the product other than our service staff.
- · Do not use with the seat unfastened.
- . Do not use after a strong impact, by way of dropping, throwing or otherwise, has been afflicted on the baby
- Do not use this product as a toy for your baby.

oWhen baby sits on the stroller to cross a height-differenced area, please watch out that the stroller may be overturned.

Please push the handle lightly and lift up the safety handle at the same time to push the stroller over the height different

walking at a normal walking speed (about 4km/h)

Be sure to conduct regular checks and maintenance.

sunshade have been installed correctly.

before using after long periods of storage.

. Do not use if the screws or nuts are loose.

. Do not join 2 baby strollers together.

• Even without a baby in the baby stroller, do not a

sloping surface, or other such dangerous places.

plastics should be used.

· Before use, be sure to check that the seat and

· Lubricate the movable parts regularly. Lubricating oil for

· Be sure to conduct checks and maintenance

leave the baby stroller near the road or on a

• Do not push the baby stroller with the front

wheels lifted off the ground. The back frame may

Caution

when your baby is in the baby stroller.

 Do not push the baby stroller through muddy or sandy areas. The wheels may not rotate smoothly as a result.

- Do not use the baby stroller with mud or sand on it. The sliding open/close lock may not operate correctly if sand gets stuck in it.
- Do not install baby seat boards on the baby stroller. The baby stroller may become damaged as a result.
- Do not place items weighing more than 5kg into the basket.
- Guardians and helpers should not sit on the baby stroller.
- Do not use the baby stroller as a trolley for things.
- Do not use the baby stroller for purposes other than baby usage.

Do not use the baby stroller in a bus.

Item denoting where misuse may cause injury or damage the product.

This product was not designed to be used in a bus. When used in a bus, turns or sudden brakes may cause the baby stroller to fall over or other unforeseeable circumstances.

· Using the baby stroller in a train.


This product was not designed to be used in a train. When used in a train, turns or sudden brakes may cause the baby stroller to fall over or other unforeseeable circumstances. The user is responsible to ensure that the stopper is engaged and to use the baby stroller with due caution.

- When on a train, do not attempt last minute boarding or alighting. The baby stroller may get caught by the automatic doors of the train leading to injuries or other unforeseeable circumstances.
- Do not use the baby stroller where snow has gathered or the road is frozen.
- · Do not use the baby stroller in strong winds.
- · Do not use the baby stroller during thunderstorms.
- Do not use the rain cover indoors where the baby stroller is close to a source of fire or heat. There may be a risk of increased temperature inside the baby stroller.
- Do not leave the baby stroller near a source of fire or under the sun. The plastic components may warp, causing deterioration of the product.
- Do not subject the baby stroller to other possible causes of damage.



 After taking the product out from the box, the product is in its folded state.
 To open the baby stroller, please refer to page 9. <After taking the product out from the box>
Part A - castor is in the locked position.

Part B - stopper is in the locked position.

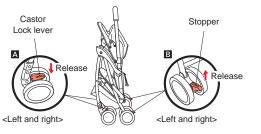

<u></u> Caution

Before use, release the locks.
(See page 10)

Supplementary items

User manual


User manual / warranty letter (this book)


<Product features>

- · Lightweight aluminum pipes are used for the frame.
- · Front to back folding type.
- The handle is fixed at the rear.
- The baby stroller can stand on its own when folded.

Introduction

Introduction

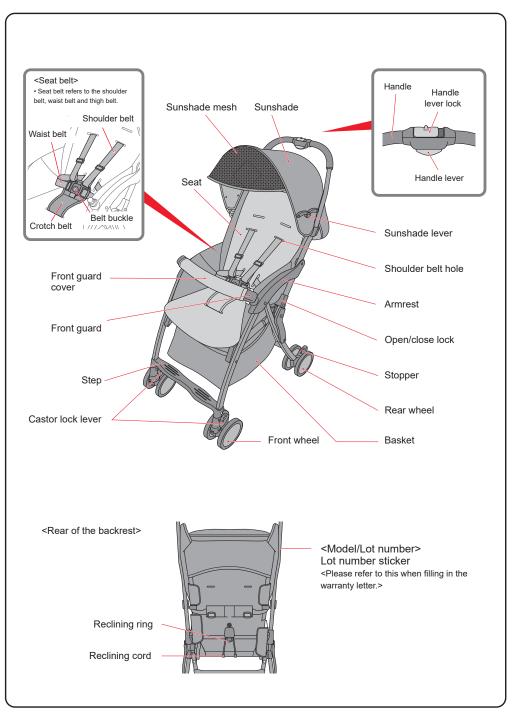

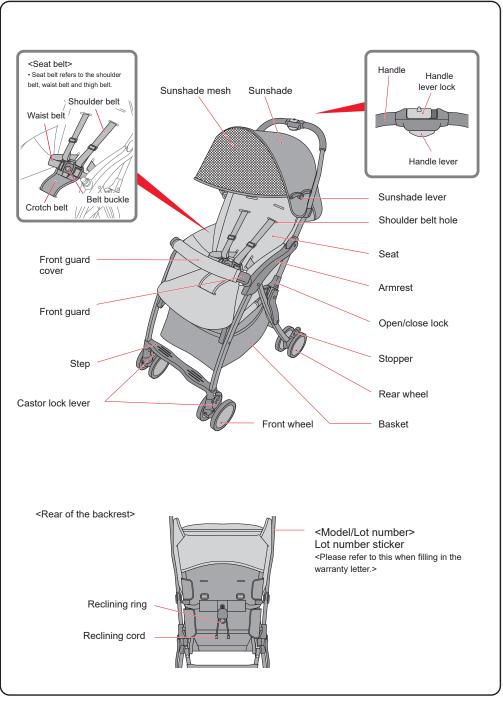

Introduction

How to Use the Baby Stroller

How to Use the Baby Stroller


Opening the Baby Stroller




- · During opening and closing, ensure that your baby is not touching the baby stroller and is not close by. There may be a risk of your child's fingers and toes being caught in the movable parts, or bumping into the baby stroller.
- Do not allow a child to operate the baby stroller. There may be a risk of the baby stroller falling over or injuries or other unforeseeable circumstances

Request

• Due to packing, there may be occasions where the frame cannot be opened or closed initially. In such cases, try to open and close the frame 2-3 times.

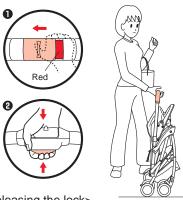


- <Releasing the lock>
- Release the handle lever lock. (Red colour is indicated.)
- 2 Gently depress the handle and grip the handle to engage the lever on the underside to release the lock.

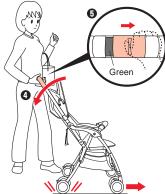


- 4 Pull the handle towards you to open.
- **5** Lock the handle lever. (Blue colour is indicated.)



3 While holding on to the handle, lift the back wheel slightly off the ground.

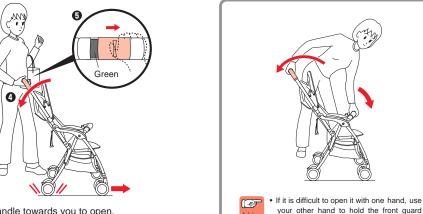

 - 6 To use the basket, remove the front fastener








while opening.

Open/close lock not fully depressed


Using the Castors

- <Releasing the lock of the castors>
- Use the baby stroller as follows under normal circumstances.

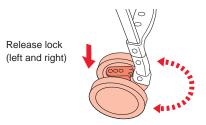

• Depress the castor lock lever to release the lock. (Left and right)

- <To lock the castors>
- On uneven surfaces or slopes, temporarily locking the castors will allow for easy pushing of the baby stroller.

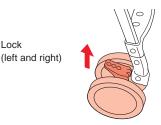

 Raise the castor lock lever to lock. (Left and right)



· When using the castors on smooth surfaces, steering the front wheels will allow for smooth change of direction.

Lock

Using the Stopper



- When placing your baby in or lifting your baby out of the baby stroller, always lock both wheels.
- . Do not rely solely on the stopper when your baby is in the baby stroller. Due to road conditions, the wear and tear of the product and other mechanical reasons, the stopper may not absolutely prevent the baby stroller from moving by itself.
- Even with the stopper locked, do not walk away from the baby stroller when you baby is still inside.



· Even when your baby is not in the baby stroller, lock both stoppers when you move away from the baby stroller.

<Releasing the stopper lock>



 Lift the wheel stopper to release the lock. (Left and right)



When locking the stopper by hand, be careful not to get your finger caught in the gap indicated by the arrow.



<Locking the stopper>




- Depress the wheel stopper to lock the wheel.
- 2 Confirm that the wheel is locked by moving the baby stroller back and forth.



. If it is difficult to lock the stopper, try the lock it again after moving the baby stroller back and forth.

Preparing for use

Seating your baby

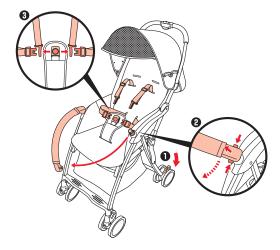

- Lock the stopper. (Left and right)
- Open the front guard.
 - Press to inner and outer guard buttons to open.
- 3 Unfasten the shoulder and waist belts.
 - Press the thigh belt buckle to release the shoulder and waist belts.
- To change the position of the shoulder belt, refer to page 13 "Adjusting the Shoulder Belt Height".
- To change the recline angle, refer to page 14 "Adjusting the Recline Angle".

3

Adjusting the belts

<Adjusting the waist belt>

<To tighten>








 Pull the belt while pressing the button to adjust the length

Advice

 The length of the waist belt should allow for 4 adult fingers to be inserted between the belt and your baby.

<Adjusting the shoulder belts>

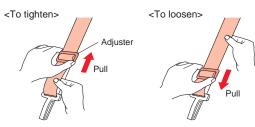



• Pull the adjuster to adjust the length



 The length of the shoulder belts should allow for 1 adult finger to be inserted between the belt and your baby.

\triangle

- The length of the shoulder and waist belts should be adjusted as your baby grows older.
 If the shoulder and waist belts are loose, even with the belts fastened, there may be a risk of your baby standing up or falling off
- Be careful not to get your baby's fingers caught when closing the front guard.
- After fastening the front guard, confirm that it is properly locked by pulling on it.
- . Do not raise the front guard when your baby is in the baby stroller.
- Leave at least 3cm at the end of the waist belt (area).
- Adjust the length of shoulder and waist belts accordingly whenever the recline angle is changed.



Place your baby in the seat with the thigh belt in between your baby's thighs

<Place your baby in the seat and fasten the seat belts>

- After fastening the seat belt, pull the waist belt to the left and right to confirm that is fastened properly. Improperly fastened seat belt may become unfastened while in use, causing your baby to fall and resulting in injury.
- The shoulder belts should always be inserted into the waist belt during use. Otherwise, there may be a risk of the shoulder belt entangling around your baby's neck.
- Even with seat belt fastened, do not take your attention off your baby.
- The position of the thigh belt should be adjusted to suit your baby.
 Otherwise, there may be a risk of the baby stroller falling backwards.

- 2 Insert the shoulder belts into the waist belt.
- 3 Insert the waist belt into the crotch buckle.
- Pull the waist belt to the left and right to confirm that is fastened properly.
 - * The length of shoulder and waist belts should be adjusted to fit your baby's size and seating position. (See page 12)



Crotch buckle

Shoulder belt

- The label on the shoulder belts should be facing outwards when fastened correctly.
- Check to ensure that the shoulder belts are not twisted.

4

 
Lastly

<Closing the front guard>



Confirm that it is properly locked.

<Releasing the stopper lock>



How to Use the Baby Stroller

 
Adjusting the Shoulder Belt Height



· Adjust the height of the shoulder belts as your baby grows older

<Shoulder belts position>

• When taken out from the box, they are set at the lower position.



<Shoulder belt guideline>

· Shoulder belts should be inserted at the position below the shoulder.



· Adjust the position of the shoulder belts as follows.

Approximate age (weight)	Shoulder belt position
18 – 36 months	Upper position
6 – 18 months	Lower position





How to Use the Baby Stroller

 
- The label on the shoulder belts should be facing outwards when fastened correctly.
- · Check to ensure that the shoulder belts are not twisted.

<Adjusting the height of the shoulder belts>

• Release the shoulder and waist belts from the thigh buckle (see page 9 Step 3)

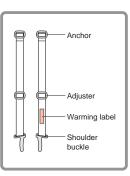


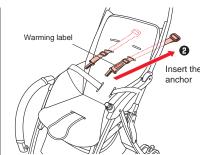




- Turn the shoulder belt anchor.
- 2 Insert the shoulder belt into the shoulder belt hole of the seat and backrest. (Left and right)

<Using the lower position>

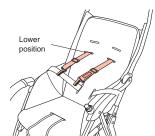


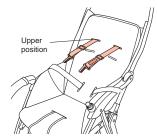


3 Pass the shoulder belts through the desired position. (Left and right)


Adjusting the Recline Angle

Lowering the backrest

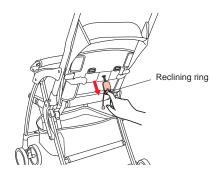

 - 1 Loosen the shoulder belts. (See page 12)
- 2 Pull the reclining ring while supporting your baby with one arm.

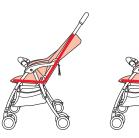



Adjust the length of the shoulder and waist belts.




- . When lowering the backrest with your baby in the baby stroller, first loosen the shoulder belts.
- · After adjusting the recline angle, adjust the lengths of the shoulder and waist belts. If the shoulder and waist belts are loose, there may be a risk of your baby standing up or falling off the baby stroller even with the belts fastened.



- · Do not adjust the recline angle while pushing the baby stroller.
- . When adjusting the recline angle with your baby in the baby stroller, do not change the recline angle abruptly.
- . When lowering the backrest with your baby in the baby stroller, support the weight of your child.
- . For babies that cannot sit upright, use the baby stroller with the backrest lowered.

Raising the backrest

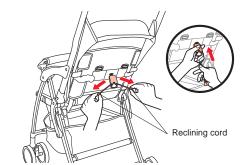


- Pull on the reclining cord to the left and right while your baby's weight is not resting on the backrest.
- . The backrest cannot be raised when your baby's weight is resting on the backrest.

Using the Sunshade




. Do not open and close the sunshade when your baby is touching it. There may be a risk of your baby's fingers or toes getting stuck in the movable parts.

Opening the sunshade

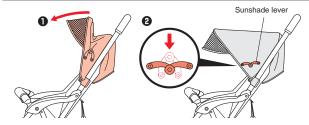

- Open the sunshade towards the front.
- 2 Lock the sunshade lever. (Left and right)


Closing the sunshade

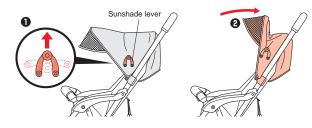

- Fold to unlock the sunshade lever. (Left and right)
- 2 Close the sunshade.


Stowing the sunshade mesh

 (Magical Air S)



• Fold the sunshade mesh inwards to stow it.

 (Magical Air Plus S)



- 1 Pass the snap button on the inside of the sunshade through the loop.
- 2 Fasten the snap button.

Using the Basket



• Please place items into the basket from the top.



· When placing things into the basket, distribute the weight as evenly as possible.



- · Do not place sharp objects into the basket. The basket may get damaged as a result
- . Do not place more than 5kg of load into the basket.
- · Remove all objects from the basket when folding the baby stroller.

How to Fold the Baby Stroller




- . During opening and closing, ensure that your baby is not touching the baby stroller and is not close by. There may be a risk of your child's fingers and toes being caught in the movable parts, or bumping into the baby stroller.
- . Do not allow a child to operate the baby stroller. There may be a risk of the baby stroller falling over or injuries or other unforeseeable circumstances



. Insert the shoulder and waist belts into the thigh buckle before folding the baby stroller. Otherwise, there may be a risk of damage to the




• Due to packing, there may be occasions where the frame cannot be opened or closed initially. In such cases, try to open and close the frame 2-3 times.

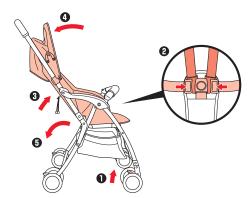

<Before folding the baby stroller>

- 1 Lock the castors. (See page 10)
- 2 Insert the shoulder and waist belts into the thigh buckle. (See page 11)
- 3 Raise the backrest. (See page 14)
- 4 Close the sunshade. (See page 15)
- 6 Remove all objects from the basket.

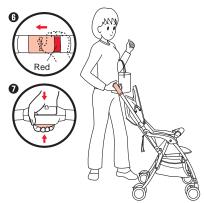





- <Releasing the lock>
- 6 Unlock the handle lever lock. Grip and engage the handle lever to
- 7 release the lock.

<Folding the baby stroller>


- 8 While gripping the handle lever, tilt the baby stroller downwards towards you to fold it.
- Raise the baby stroller.
- 10 Lock the handle lever.



· If it is difficult to open it with one hand, hold the front guard with your other hand.


How to remove

3 Secure the back fastener of the sunshade.

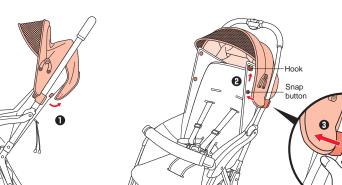


- Detach the sunshade back fastener.
- 2 Unbutton the snap button at the side of the seat and pull upwards to release the hook. (Left and right)
- 3 Flick the sunshade bracket towards you to unfasten. (Left and right)

How to install

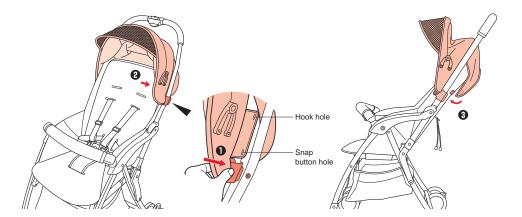


- 1 Mount the sunshade bracket on to the protruding plug. (Left and right)
- 2 Fasten the sunshade's hook hole, through the hook on the side of the seat, and to the hook on
- Fasten the snap button, through the side handle, to the button on the side of the seat.

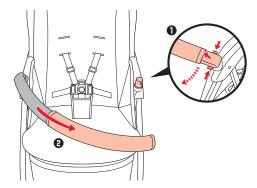


- 1 Open the front guard cover.
 - Press the inner and outer guard buttons to open.
- 2 Remove the front guard cover.

Maintenance

- · Do not use the baby stroller with the seat removed. There may be a risk of damage to the baby stroller, or leading to injuries or other unforeseeable circumstances.
- Remove the seat after removing the sunshade and basket. (See page 17)

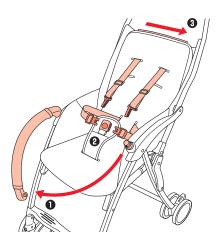

- 1 Detach the front guard.
- 2 Push the buckle button to detach the shoulder and waist belts.
- 3 Open up the zip.

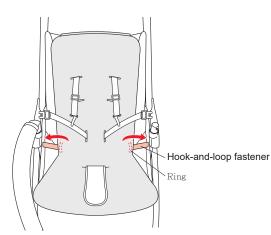

6 Unfasten the hook-and-loop fasteners from both 6 Take out the shoulder belts, crotch belts and waist ring (rear side) of the seat. (Left and right)



4 Unfasten the belt hook at both sides below the seat .


(Left and right)

- belts from the seat area
- . To install the seat, carry out the above steps in reverse order.


Removing the Seat (Magical Air Plus S & Magical Air Plus Bitte)




- Do not use the baby stroller with the seat removed. There may be a risk of damage to the baby stroller, or leading to injuries or other unforeseeable circumstances.
- Remove the seat after removing the sunshade and basket. (See page 17)

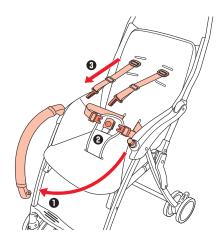


- Detach the front guard.
- 2 Push the buckle button to detach the shoulder and waist belts.
- 3 Pull out the shoulder belts.

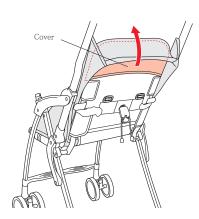

Pull off the top cover of the backrest.

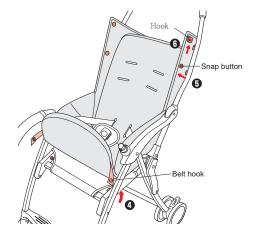

- 4 Unfasten the belt hooks under the seat. (Left and right)
- 6 Unfasten the snap button on the sides of the seat. (Left and right)
- 6 Pull the hooks on the side of the seat upwards to release. (Left and right)

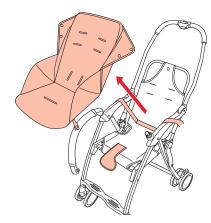

Remove the seat while holding the thigh and waist belts.

· To install the seat, carry out the above steps in reverse order.

to Use the Baby Stroller















※ Do not wring or twist.



- The seat base cannot be removed
- Do not wash with a washboard.
- . When drying the fabric parts, lay flat to dry under shade. · With use, the dark coloured fabrics may discolour gradually.

<Washing the sunshade, Shoulder belts and basket>

- . Do not machine wash. Adhere to the following instructions.
- For water-based stains (fruit juice, drool, urine, etc.) Dip a towel in warm water of about 40°C, wring gently and apply to the stained area. Sponge dry with a dry towel and leave it to dry under shade.
- For non-water-based stains (milk, oil, mayonnaise, etc.) Dilute a neutral detergent in warm water of about 40°C and apply with a sponge to the stained area. Rinse with cold or warm water and sponge dry with a dry towel, and leave it to dry under shade.
- · The fabric parts are consumable items. Torn, worn out, or frayed parts can be exchanged by contacting our customer support centre. (Service provided at a fee)
- · With use, the dark coloured fabrics may discolour gradually.

Maintenance of the baby stroller main unit

<Maintenance of the frame and wheels>

• Do not leave mud, dirt and debris on the frame and wheels. Be sure to wipe them clean with a wringed





- Do not leave mud and soil on the frame and wheels. Doing so may cause damage to the baby stroller.
- When cleaning mud and soil, do not use thinner, benzene, or other volatile cleaning solutions.
- The wheels are consumable components. Worn out tyres reduced to about 5mm of thickness can be exchanged by contacting our customer support centre. (Service provided at a fee)

<For the screws and nuts>

· Check periodically to ensure that the screws and nuts have not become loose. Tighten them if necessary.

<For the front guard>

. Do not leave dust and debris at the connecting point of the front guard. Be sure to remove them with a wringed moist towel.


<Lubricating oil>

- · Before applying lubricating oil, clean the area of mud and soil and wipe off moisture sufficiently.
- · Apply 2-3 drops of oil per area.



Do not apply lubricating oil at the area where the front guard connects to the arm rests. There may be a risk of the front guard detaching, leading to danger to your baby.



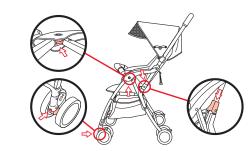

• When the folding and opening of the baby stroller cannot be done smoothly, or when the castors no longer rotate freely, apply 2-3 drops of off-the-shelf lubricating oil at the parts marked by the arrow \Rightarrow in the diagram.

Troubleshooting

· For problems that cannot be solved by the following troubleshooting guide, please contact our customer support centre.

<Problems encountered during use>

Problem	Solution
Front castors cannot rotate	Unlock the left and right castors. (See page 10)
Front castors rotate unevenly	Apply lubricating oil to the castors. (See page 21)
The stoppers do not work	Ensure that no debris is lodged in the stopper.
Recline angle cannot be raised	Take your baby out of the baby stroller and pull the reclining cord. (See page 14)
Shoulder belts cannot be inserted into waist belt	Ensure that clothing fabric has not been caught in the seat belt.
Baby stroller cannot be folded	<before folding=""> Carry out the <lock release=""> before folding. (See page 16) Ensure that the seat belt is not caught in the open/close lock.</lock></before>
Tyre has been worn out	Worn out tyres reduced to about 5mm of thickness have to be replaced. Please by contact our customer support centre.

<When using as a pre-used item>

Problem	Solution
Uncertain of how the previous user operated the baby stroller	Using a product that is in an unknown condition is not recommended.
Baby stroller has cracks or large damage	Cannot be used.

Storage

- Store the baby stroller in a polyethylene bag, and in a dark cool place away from direct sunlight.
- Do not store with heavy loads placed on top as it may result in damage or deformation of the product.



- . To prevent deformation of the sunshade, do not store horizontally or place heavy loads on top of it.
- Do not store near a fire, or in a vehicle where it will be exposed to high temperature The plastic parts may become deformed and their performance cannot be maintained as a result.

Disposal

- Dispose of the product according to your local government regulations.
- To protect the environment, do not dispose in locations other than those specified